


# Connection Fittings Installation Guide



# VITOSOL<sub>®</sub>

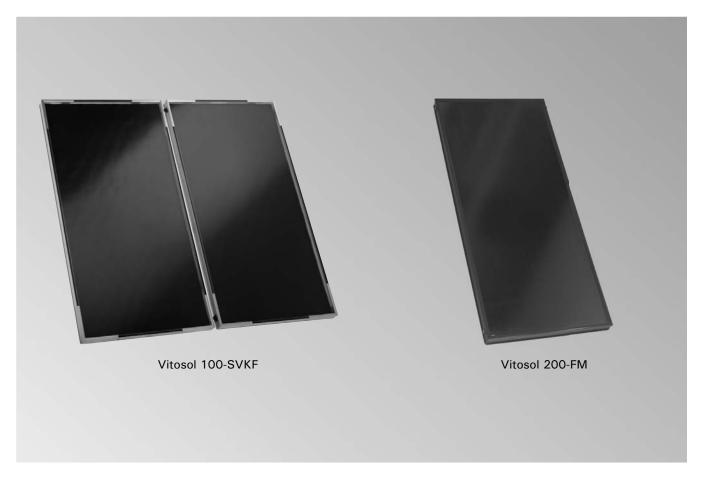

Vitosol DHW Solar Pack Vitosol 200-FM Flat Plate Collectors

	Page
Parts and Components	Fitting Sets and Kits 3
	Collector Loop Fittings 3
	Spare Parts / Individual Fittings 5
Layout Drawings	Connection Fitting Parts Index 7
	Connection Fittings for DHW Solar Pack 8
	Connection Fittings for 200-FM with Solar-Divicon DN20B/DN25B11
	Piping Connections for Expansion Tanks16
Contacts	Contacts17

# **Fitting Sets and Kits**

Item	Description	Part Number
General Connection Set	One set required for each Vitosol 200-FM collector array.  Array size can be 1 to 12 collectors. Contains all the required fittings for pipe connection to collector.  Contents:  2 x brass connecting pipe (one long, one short)  2 x brass plugs  4 x stainless steel profile clamp  2 x 22 mm 90° compression elbow  1 x package of O-ring silicone assembly grease  2 x copper tube support inserts	200-FM 7248240
Installation Fittings Set	One set required for each system. Contains the metric conversion fittings required to connect to the collector array and the conversion adaptor for the expansion tank fitting.  Contents:  4 x copper pipe adaptors – 22 mm dia to ¾" dia x 4" long  1 x copper pipe stub – 22 mm dia x 2.4" long  1 x ¾" BSPT Female x ¾" NPT male adaptor  1 x gasket  1 x package of technical literature	200-FM ZK02868 (CA) ZK02870 (USA)

# **Collector Loop Fittings**

Item	Description	Part Number
Interconnection Pipe Set	Used to connect Vitosol 200-FM collectors together. Brass fittings with double O-ring seal, connected by flexible stainless steel pipe.  Contents:  2 x interconnection pipes  1 x package of O-ring silicone assembly grease	200-FM 7248239
Sensor Well Set	Collector sensor well set for Vitosol 200-FM.  One required per system. Installed in top collector outlet piping.  Contents:  1 x 22 mm compression tee  1 x immersion sensor well  1 x sensor wire strain relief  1 x insulation cover  1 x copper tube support insert	200-FM 7174993

# **Collector Loop Fittings** (continued)

Item	Description	Part Number
Automatic Fast Air Vent	Air vent for high point of each collector array.  Built in shut-off valve for 100% isolation after system is totally vented 22 mm brass compression couplings.  Note: If ordered individually, requires 2 x PN 9543380 - copper adaptors – 22 mm x ¾" x 4".	200-FM 7316789
Manual Air Vent	Air vent for high point of each collector array.  Can be used as an alternate to the Fast Air Vent.  Manual key vent, 22 mm brass compression couplings.  Note: If ordered individually, requires 2 x PN 9543380 - copper adaptors – 22 mm x ¾" x 4".	200-FM 7316263
Automatic Air Vent With Micro-Bubble Mesh	Air separator for location in mechanical room. Wire mesh micro-bubble separator, with built in shut-off valve 22 mm brass compression couplings.	7316049
	Note: If ordered individually, requires 2 x PN 9543380 - copper adaptors – 22 mm x ¾" x 4".	
Brass Elbow With Sensor Well	Solar tank sensor well for Vitocell tanks. Installs on solar glycol return line to collectors.	
	Note: Must be ordered separately for all other tanks.	
	1" probe, for Vitocell 300-W tanks, 42 USG:	7606041
	– for tanks with NPT threads	
	1" probe, for Vitocell 300-B, 300-V tanks, 53 to 79 USG:	7606041
	– for tanks with NPT threads	
	1 ¼" probe, for Vitocell 300-B, 300-V tanks, 119 USG:	7606042
	– for tanks with NPT threads	
Expansion Tank Flex Pipe	Flexible ¾"G x 19" (500 mm) long Stainless steel flexible connection pipe.  Used to connect expansion tank to Solar-Divicon DN20B / DN25B. Compression fitting with gasket.  Note: Only for use with the following tank models: 18L, 25L, 40L	7497468

# **Spare Parts / Individual Fittings**

Item	Description	Part Number
Copper Adaptor	Included with the Installation Fittings Set (see page 3), but can be ordered individually.	200-FM 9543380
	Used to connect standard NPT copper to all Vitosol fitting with compression couplings (eg. Supply/Return piping to 90° compression elbow.	
	Copper adaptor pipe stub – 22 mm dia x ¾" Copper x 4" long.	
Copper Connector	Included with the Installation Fittings Set (see page 3), but can be ordered individually.	200-FM 5276590
	Used to connect two items together that both have 22 mm compression couplings (eg. Air vent and sensor well).	
	Copper pipe stub – 22 mm dia x 2.4" long.	
Vitosol Profile Clamp	Included with the General Connection Set (see page 3), but can be ordered individually.	200-FM, 7317074
	Used for Vitosol 200-FM to attach brass connection pipes and plugs to the collector header pipe.	
Brass Collector Connection Pipe - Short	Included with the General Connection Set (see page 3), but can be ordered individually.	200-FM 7827514
	Used for Vitosol 200-FM to connect piping to the collector header pipe.	
Brass Collector Connection Pipe – Long	Included with the General Connection Set (see page 3), but can be ordered individually.	200-FM 7827515
	Used for Vitosol 200-FM. To connect piping to the collector header pipe.	
Brass Collector Plug	Included with the General Connection Set (see page 3), but can be ordered individually.	200-FM 7827516
	Used for Vitosol 200-FM to plug the collector header pipe.	
Compression Connector – Union	Brass union fitting with 22 mm compression fittings (sold in a set of 2).	All collectors 7819612
	Used for a straight connection between two 22 mm pipes:  - To bring S/R piping straight out of collector instead of using 90° compression elbow.	
	To extend pipe between two collectors that have to span an obstruction.	

# Spare Parts / Individual Fittings (continued)

Item	Description	Part Number
Compression Connector, 90° Elbow	Brass elbow fitting with 22 mm compression fittings. Included with the General Connection Set, but can be ordered individually.	All collectors 7819611
Collector Fitting O-rings	Package of 4. Spare parts, used for all collector fittings.	200-FM 7819604
Silicone Assembly Grease	6 gram package. Included with the General Connection Set (see page 3) and with the Interconnection Pipe Set (see page 4). This can be ordered individually.  Used for lubricating O-rings on all collector fittings.	All collectors 7819602
Solar Divicon Expansion Tank Adaptor Fitting	Coupling, ¾" BSPT x ¾" NPT Brass. Included with the Solar Divicon fittings, but can be ordered individually.  Used to connect NPT piping to the expansion tank connection on all Solar Divicon.	All Solar Divicon 7134829
Expansion Tank Service Valve Adaptor Fitting	Adaptor, ¾" G female - ¾" NPT male. Included with the Installation Fittings Set (see page 4), but can be ordered individually.  Used to connect NPT piping to the service valve on the expansion tank.	18 to 50 L Expansion Tanks 9635592
Flat Gasket	Flat Gasket, 17 x 24 x 1.5mm	9535412
0	Used with solar divicon expansion tank adaptor, expansion tank service valve adaptor, solar expansion tank service valve & flexible tank adaptor. This can be ordered individually.	


# **Connection Fittings Parts Index**

(1)	<b>#</b>	Ø22mm Compression 90 deg Elbow
(2)	<b></b>	Connection Pipe - Short - 200-FM
(3)		Connection Pipe - Long - 200-FM
<u>(4)</u>		Connection Plug - 200-FM
(5)	Ω∥	Vitosol Profile Clamp - 200-FM & 1/2" Insulated Flexible S.S. Piping
(6)	4	Interconnection Pipe Set - 200-FM
<ul><li>②</li><li>③</li><li>④</li><li>⑤</li><li>⑥</li><li>⑦</li></ul>	S1 <b>•</b> □── <b>□</b>	Sensor Well Set - 200-FM
8	i di	Fast Air Vent c/w Shut-off
9		Copper Pipe Stub Ø22 mm x 2 1/2" Long
10		Copper Adaptor Pipe Stub - Ø22mm x ؾ" x 4" Long
11		Ø1/2" Rigid Copper Pipe (Field Supplied)
12		Ø3/4" Rigid Copper Pipe (Field Supplied)
13		Ø1" Rigid Copper Pipe (Field Supplied)
14)		1/2" Insulated Flexible S.S. Piping
15	0 -	Vitosol O-rings (Solar Rated)
16	0 -	Vitosol Plastic Spacer (White)
17	B • ==	Ø22mm Compression Nut - 1/2" SS Piping
18	0 0	Ø22mm Compression Sleave - 1/2" SS Piping
19	Ī	Ø22mm Compression Adaptor - 1/2" SS Piping
20	<b>©</b>	3/4" BSPT x 3/4" NPT Brass Coupling
21	0 -	Flat Fiber Gasket
©©©©©©©©©©©©©©	₽	3/4" G Female x 3/4" NPT Male Adaptor
23		Flexible S.S. Expansion Tank Adaptor
24	<b>œ</b>	3/4" Expansion Tank Service Valve
25	B( <b>**</b> **********************************	1" Expansion Tank Service Valve
26	<b>№</b> — S2	Brass Elbow c/w Sensor Well
27	40	Ø1/2" x Ø3/4" Copper Reducing Coupling (Field Supplied)
28	<b></b>	Ø3/4" x Ø1" Copper Reducing Coupling (Field Supplied)
29	Œ	3/4" Female NPT x Ø3/4" Copper Sweat Adaptor (Field Supplied)
30	<b>C</b>	3/4" Male NPT x Ø3/4" Copper Sweat Adaptor (Field Supplied)
\( \text{3}	c#	1" Male NPT x Ø1" Copper Sweat Adaptor (Field Supplied)
32	6 <b>11</b> 0	Ø22mm Straight Compression
33	□ <b>□□□</b> S1	200-F SVK Connection Set (Insulated Flexible S.S. Piping)
34)	c	Locking Clip

# **Connection Fittings for DHW Solar Pack**

Note: Vitosol 100-FM SVKF with ½ "copper piping,

pumping station included with pack. **Note**: See numbered parts index on page 7.

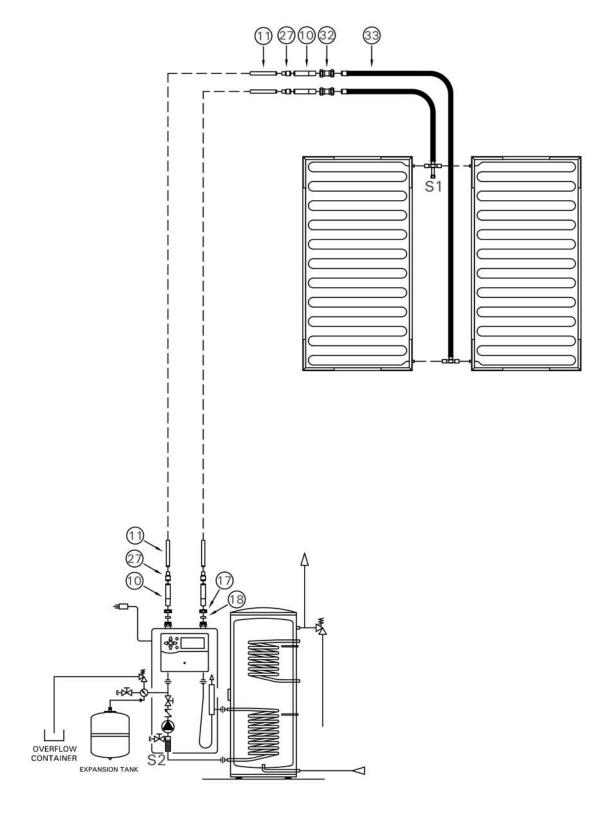

#### Connection Fittings for DHW Solar Pack (continued)


**Note:** Vitosol 100-FM SVKF with ½ "stainless steel line set, pumping station included (with locking clip).

Note: See numbered parts index on page 7.

Note: Item (18) is not required.

#### **IMPORTANT**

The  $\frac{1}{2}$ " stainless steel line set has a minimum bend radius of 2". If possible a bend radius larger than 2" is recommended.

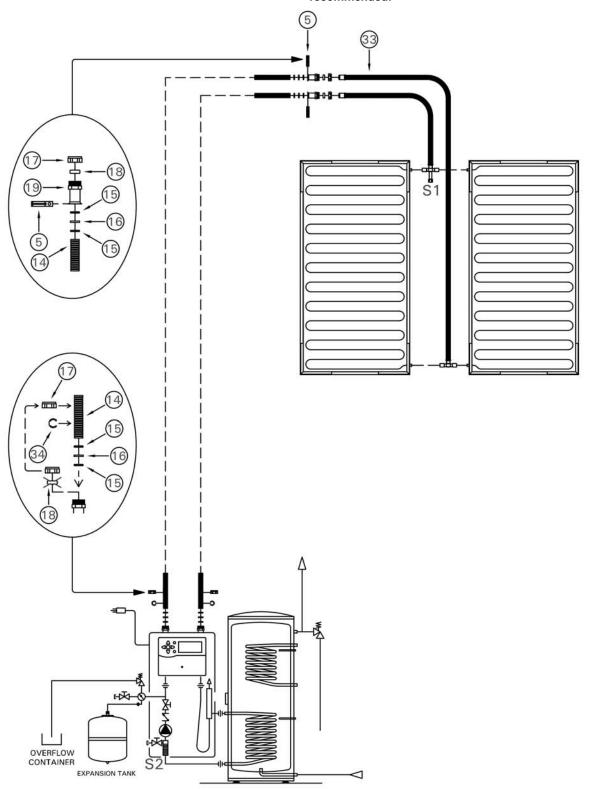

#### Connection Fittings for DHW Solar Pack (continued)


Note: Vitosol 100-FM SVKF with ½ "stainless steel line set, pumping station included (with copper

connector)

Note: See numbered parts index on page 7.


#### **IMPORTANT**

The  $\frac{1}{2}$ " stainless steel line set has a minimum bend radius of 2". If possible a bend radius larger than 2" is recommended.

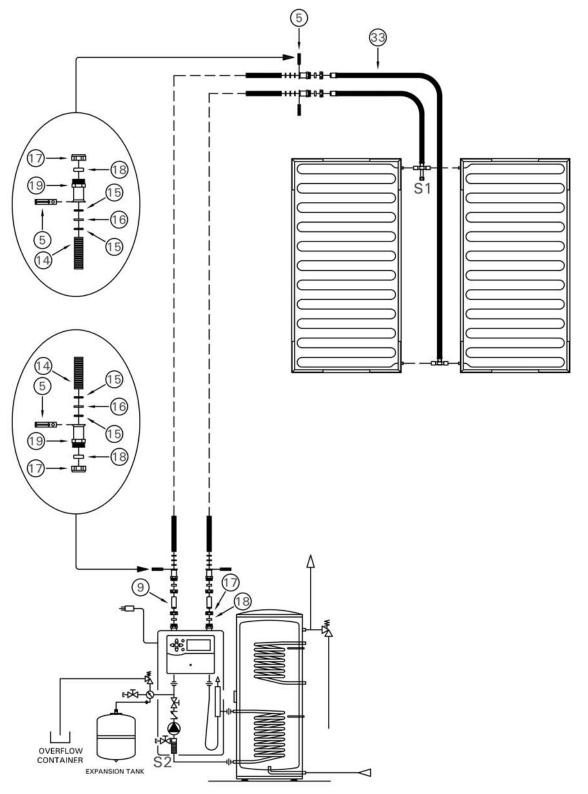


# Connection Fittings for 200-FM with Solar-Divicon DN20B

Note: Vitosol 200-FM with  $\frac{1}{2}$  copper piping Note: See numbered parts index on page 7.

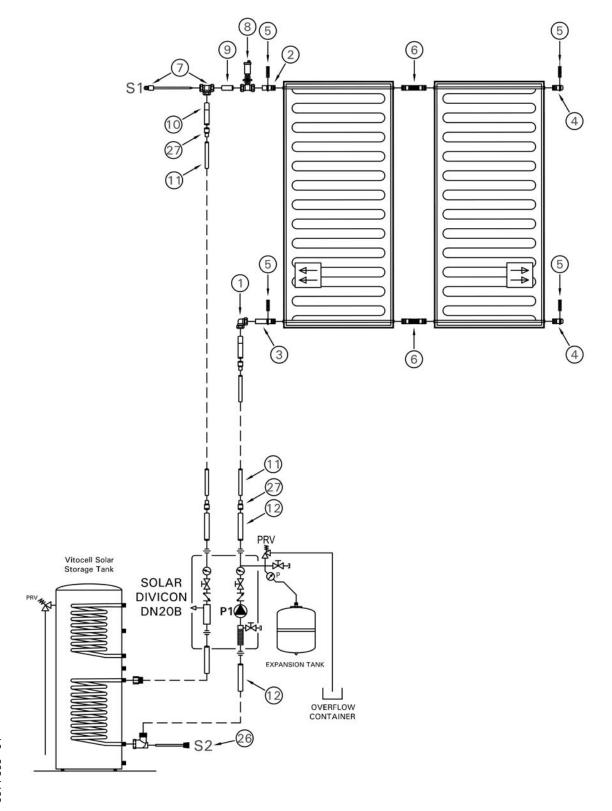


# Connection Fittings for 200-FM with Solar-Divicon DN20B

**Note:** Vitosol 200-FM with ¾"copper piping **Note:** See numbered parts index on page 7.

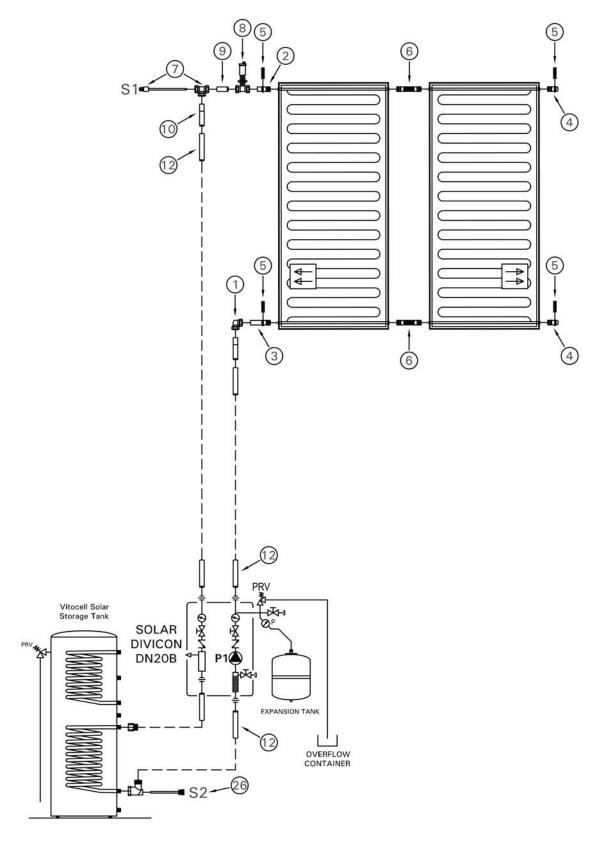

#### Connection Fittings for 200-FM with Solar-Divicon DN25B

**Note:** Vitosol 200-FM with ¾"copper piping **Note:** See numbered parts index on page 7.

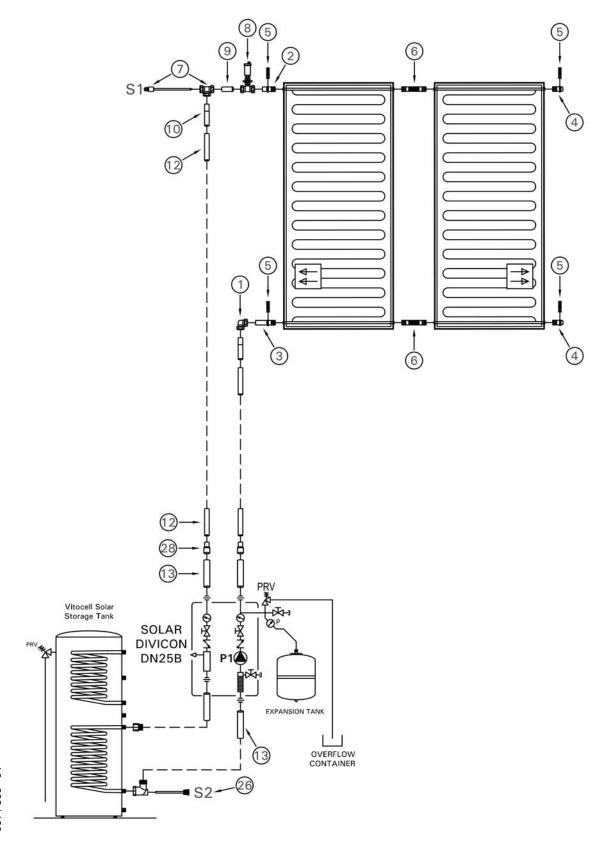


#### Connection Fittings for 200-FM with Solar-Divicon DN20B (continued)

Note: Vitosol 200-FM with  $\frac{1}{2}$  stainless steel line set.

Note: See numbered parts index on page 7.

#### **IMPORTANT**


The  $\frac{1}{2}$ " stainless steel line set has a minimum bend radius of 2". If possible a bend radius larger than 2" is recommended.

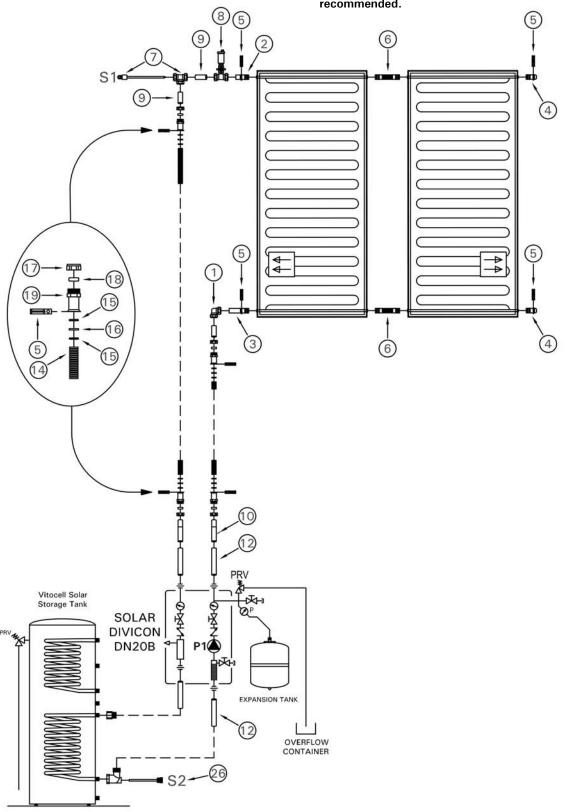

#### Connection Fittings for 200-FM with Solar-Divicon DN25B

Note: Vitosol 200-FM with 1/2 "stainless steel line set.

Note: See numbered parts index on page 7.

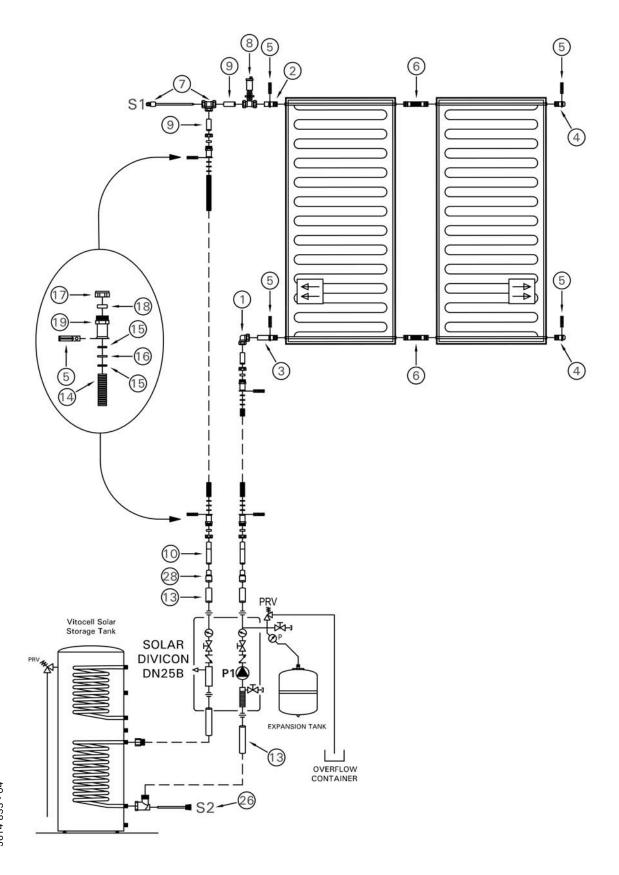

#### **Expansion Tank Piping Connections**

Note: See numbered parts index on page 7.

#### **IMPORTANT**

The  $\frac{1}{2}$ " stainless steel line set (option #2) has a minimum bend radius of 2". If possible a bend radius larger than 2" is recommended.

# SOLAR DIVICON (DN20B/DN25B) PRV 30 20 30 Option #1 EXPANSION TANK WALL-HUNG MODEL 18-40L Option #3 EXPANSION TANK WALL-HUNG MODEL 18-40L EXPANSION TANK WALL-HUNG MODEL 18-40L

<sup>\*</sup>Special Note:

<sup>-</sup>The 1/2" stainless steel lineset has a minimum bend radius of 2". If possible a larger bend radius would be recommended.

#### Contacts

If you have any questions about any of these connection fittings or connection drawings, please contact your Solar Technical Support Team:

Viessmann - Waterloo, Ontario, Canada Steve Royce 1-519-885-6300 roys@viessmann.com

Viessmann - Langley, British Columbia, Canada Scott Boutillier 1-604-533-9445 bous@viessmann.com

Viessmann - Warwick, Rhode Island, USA Nick Toman 1-401-732-0667 tomn@viessmann.com