

# Installation Instructions


for use by heating contractor



Common Venting for:

Vitodens 200 B2HA 285 to 530

## VITODENS COMMON VENTING SYSTEM

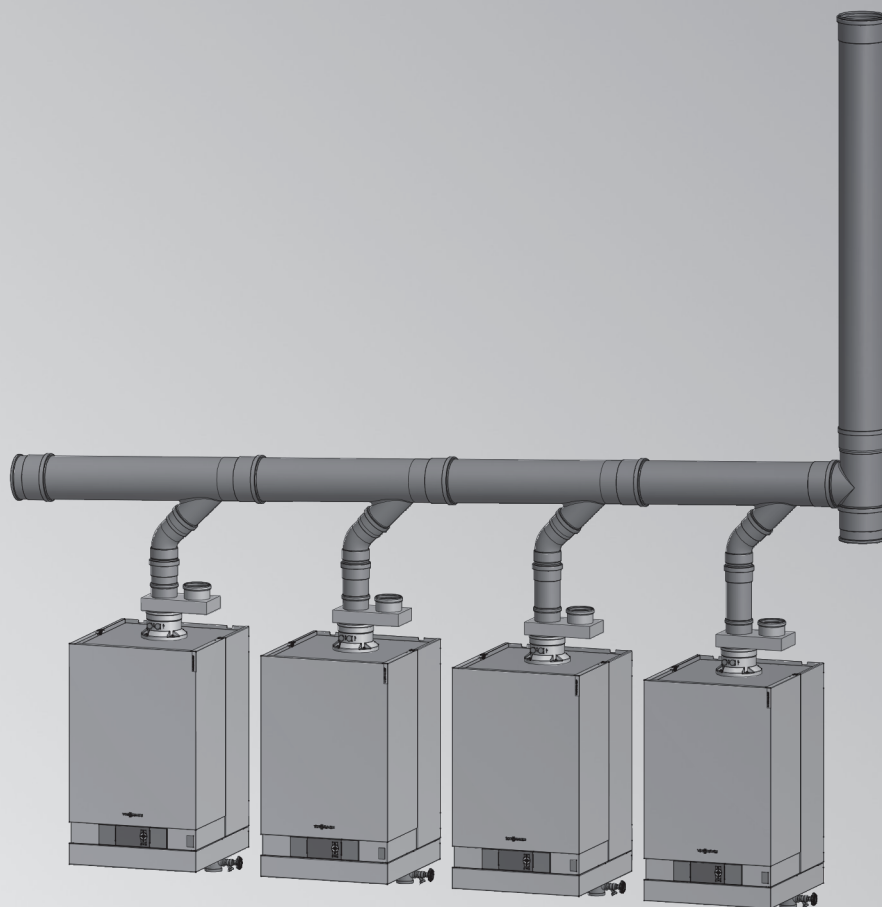

*Product may not be exactly as shown*

### IMPORTANT

Read and save these instructions  
for future reference.



## About these Instructions



Take note of all symbols and notations intended to draw attention to potential hazards or important product information. These include "WARNING", "CAUTION", and "IMPORTANT". See below.



### WARNING

Indicates an imminently hazardous situation which, if not avoided, could result in death, serious injury or substantial product/property damage.

► *Warnings draw your attention to the presence of potential hazards or important product information.*



### CAUTION

Indicates an imminently hazardous situation which, if not avoided, may result in minor injury or product/property damage.

► *Cautions draw your attention to the presence of potential hazards or important product information.*

### IMPORTANT



► *Helpful hints for installation, operation or maintenance which pertain to the product.*



► *This symbol indicates that additional, pertinent Information is to be found.*

► *This symbol indicates that additional, pertinent Information is to be found.*

## Safety, Installation and Warranty Requirements

Please ensure that these instructions are read and understood before commencing installation. Failure to comply with the instructions listed below and details printed in this manual can cause product/property damage, severe personal injury, and/or loss of life. Ensure all requirements below are understood and fulfilled (including detailed information found in manual subsections).

### ■ Product documentation

Read all applicable documentation before commencing installation. Store documentation near boiler in a readily accessible location for reference in the future by service personnel.



► *For a listing of applicable literature, please see section entitled "Important Regulatory and Safety Requirements".*

### ■ Licensed professional heating contractor

The installation, adjustment, service and maintenance of this equipment must be performed by a licensed professional heating contractor.



► *Please see section entitled "Important Regulatory and Installation Requirements".*

### ■ Carbon monoxide

Improper installation, adjustment, service and/or maintenance can cause flue products to flow into living space. Flue products contain poisonous carbon monoxide gas.



► *For information pertaining to the proper installation, adjustment, service and maintenance of this equipment to avoid formation of carbon monoxide, please see subsection entitled "Mechanical room" and "Venting requirements" in this manual.*



## WARNING

**Installers must follow local regulations with respect to installation of carbon monoxide detectors. Follow the Viessmann maintenance schedule of the boiler contained in this manual.**

### ■ Advice to owner

Once the installation work is complete, the heating contractor must familiarize the system operator/ultimate owner with all equipment, as well as safety precautions/requirements, shutdown procedure, and the need for professional service annually before the heating season begins.

### ■ Warranty



Information contained in this and related product documentation must be read and followed. Failure to do so renders the warranty null and void.

## Important Regulatory Requirements

### Approvals

Viessmann boilers, burners and controls are approved for sale in North America by CSA International.

### Codes

The installation of this unit shall be in accordance with local codes. In the absence of local codes, use:

- CSA C22.1 Part 1 and/or local codes in Canada
- National Electrical Code ANSI/NFPA 70 in the U.S.

Always use latest editions of codes.

The heating contractor must comply with the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1 where required by the authority having jurisdiction.

### Working on the equipment

The installation, adjustment, service, and maintenance of this product must be done by a licensed professional heating contractor who is qualified and experienced in the installation, service, and maintenance of hot water boilers. There are no user serviceable parts on the boiler, burner, or control.

### Power supply

Install power supply in accordance with the regulations of the authorities having jurisdiction or, in absence of such requirements, in accordance with National Codes. Viessmann recommends the installation of a disconnect switch to the 120V power supply outside of the boiler room.

Ensure main power supply to equipment, the heating system, and all external controls have been deactivated. Close main oil or gas supply valve. Take precautions in both instances to avoid accidental activation of power during service work.

- Please carefully read this manual prior to attempting installation. Any warranty is null and void if these instructions are not followed.

For information regarding other Viessmann System Technology componentry, please reference documentation of the respective product.

We offer frequent installation and service seminars to familiarize our partners with our products. Please inquire.

- The completeness and functionality of field supplied electrical controls and components must be verified by the heating contractor. These include low water cut-offs, flow switches (if used), staging controls, pumps, motorized valves, air vents, thermostats, etc.

	<p><b>WARNING</b></p> <p>Turn off electric power supply before servicing. Contact with live electric components can cause personal injury and/or loss of life.</p>
---	--

## General Venting Information

### Installation steps (outline)



See Installation Instructions supplied with the boiler.



### WARNING

Ensure that the entire venting system is protected from physical damages. A damaged venting system may cause unsafe conditions.

### IMPORTANT

#### Boiler operation in marine environments (damp, salty coastal areas):

The service life of the boiler's exposed metallic surfaces, such as the casing and fan housing, is directly influenced by proximity to damp and salty marine environments. In such areas, higher concentration levels of chlorides from sea spray, coupled with relative humidity, can lead to degradation of the exposed metallic surfaces mentioned above. Therefore, it is imperative that boilers installed in such environments not be installed using direct vent systems which draw outdoor air for combustion. Such boilers must be installed using room air dependent vent systems; i.e. using room air for combustion. The indoor air will have a much lower relative humidity and, hence, the corrosion will be minimized.

- Route vent pipe as directly as possible and with as few bends as possible to the boiler.
- Check proper location of gaskets in rigid PP pipe collars. (Only use supplied parts with the polypropylene venting system.) Apply water to lubricate the joint ends of the vent pipe collar and if used, the air intake pipe collar.
- Slide pipes into each other with a gentle twisting motion.
- Condensate must drain from the flue pipe to the boiler. Ensure a suitable gradient of at least 2-3° [approx. 2 in. per 3.3 ft. (50 mm per 1 m)].
- Use a hacksaw or sheet metal snips (for stainless steel) to cut pipes to length (if necessary). Use a file to smooth rough edges. Pipe must be round and not bent into an oval shape.

### IMPORTANT

#### When cutting pipes to length, debur and clean pipes.

- For stainless steel and PP venting systems:  
In conjunction with these instructions, follow the installation instructions supplied by the special venting manufacturer.

Combustion air intake, flex hose and adaptor must be installed. If using room air-independent venting system, connect the air intake pipe (from outdoors) to the adaptor provided. If room air-dependent venting system is used, the air is drawn into the burner inlet through boiler adaptor.

#### Recommended venting practice

When installing a venting system the following recommended venting practices apply:

- Keep length and number of 90° elbows to a minimum.
- Try not to use back-to-back 90° elbows.
- Use 45° elbows where possible to minimize the number of 90° elbows in case redirection of flue gas is required.
- The special vent system shall not be routed into, through, or within any other vent such as an existing masonry or factory-built chimney.

#### Exception:

A masonry chimney or factory built flue may be used to route the venting system (as a chase) only if no other appliance is vented in the same flue.

## General Venting Information

### Combustion air intake materials

Part	Material	Certified to Standards	Applicability
Combustion air pipe and fitting	Stainless steel	No applicable standards	U.S.A/Canada
	Galvanized steel	Suitable for outdoor use	
	PVC-DWV Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441	
	CPVC Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441	
	ABS-DWV Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441	
	Polypropylene PP(s)	UL1738 "Venting systems for gas-burning appliances, Categories II, III, IV" ULC S636 "Standard for Type BH gas venting systems" Class IIC 110°C	
Pipe cement, primer (for combustion air intake pipe)	PVC	ANSI/ASTM D2564 CSA B137.3	
	CPVC	ANSI/ASTM F493 CSA B137.6	
	ABS	ANSI/ASTM D2235 CSA B181.1/B182.1	

### CAUTION

Do not use cellular (foam) core pipe material to vent this Vitodens boiler.

### CAUTION

On the job site, ensure that non-listed combustion air pipe materials are not inadvertently used instead of listed vent pipe material.

### Note:

Venting systems may combine two different approved venting materials, provided that all venting materials and all required transition adaptors are supplied by one venting manufacturer. Always use latest edition of applicable standard.

## General Venting Information

### Flashing and storm collar installation

Flashings and storm collars are field supplied. Flashings and storm collars suitable for Type B vent materials (or better) may be used.

To obtain flashings and storm collars, please contact your local vent material supplier. Follow the installation instructions supplied by the special venting manufacturer.

Follow local codes to properly isolate the exhaust vent pipe when passing through floors, ceiling and roof.

Always check the marking on the pipe to make sure you are using the correct material. Contact one of the suppliers (see listing on right) to order the vent system. Prior to installation, check that the correct single-wall vent parts were ordered and supplied.

### Exhaust vent/air intake connection to boiler

The vent connection to the Vitodens boiler must be made with the starter stainless steel adaptor when using stainless steel (supplied by others).

### IMPORTANT

**For exhaust vent pipe material:  
Do not use any other vent material.**

### Vent System Suppliers

Use special venting system (UL/ULC listed for Category IV) for exhaust vent material of the Vitodens boilers (contact one of the venting suppliers).

---

**Duravent**

[www.duravent.com](http://www.duravent.com)

---

**Selkirk Canada Corporation**

[www.selkirkchimney.com](http://www.selkirkchimney.com)

---

**Centrotherm InnoFlue**

[www.centrotherm.us.com](http://www.centrotherm.us.com)

---

**Security Chimneys International Ltd.**

[www.securitychimneys.com](http://www.securitychimneys.com)

---

**ICC - Industrial Chimney Co.**

[www.icc-rsf.com](http://www.icc-rsf.com)

---

**Z-Flex US Inc. (Flexmaster Canda)**

[www.z-flex.com](http://www.z-flex.com)

---

**Van-Packer Co. Inc.**

[www.vpstack.com](http://www.vpstack.com)

---

**Energex Inc. (formerly Exhausto)**

[www.energex.com](http://www.energex.com)

---

### Note:

For stainless steel venting system order transition adaptors from the above mentioned suppliers.

## Requirements for Rigid SS/PP(s) Vent Pipe Material

### Requirements for PP and stainless steel



See Installation Instructions supplied with the boiler.

The venting system must be installed by a licensed professional heating contractor familiar with the operation and maintenance of heating appliances and venting. Before installing, ensure that the complete installation literature has been read. Failure to follow proper installation procedures as stated in these instructions, including vent pitch and proper appliance connections, may violate local, provincial/state, or national codes and cause unsafe conditions which may lead to severe property damage or personal injury.

The venting system must be installed in accordance with local building code requirements as well as national codes. For installations in Canada use CAN/CSA-B149.1 Natural Gas Installation Code or CAN/CSA-B149.2

Propane Installation Code as applicable; in the U.S. use the National Fuel Gas Code ANSI Z223.1 or NFPA Standard 54.

Always use latest edition of applicable standard.

To ensure safe operation of the appliance, Viessmann recommends that the system be inspected once a year by a qualified service technician.

Every venting system must be planned and installed for optimum performance and safety. These Installation Instructions are designed to help you determine venting requirements and limitations with respect to installation. Please read and follow these instructions carefully.

It is the responsibility of the installer to contact local building and fire officials concerning any installation restrictions and/or inspection requirements that may apply. Permits may be required before commencement of the installation.

The air intake termination (if installed on a side wall) should be located on a wall that is least affected by prevailing winds. High winds may affect boiler operation. If wind is a problem, steps must be taken to shield the air intake termination from high winds, such as building a fence or planting shrubs. Ensure that the total equivalent vent length is not exceeded.

Because of its sealed combustion chamber, the Vitodens 200 gas-fired condensing boiler is suitable for operation with balanced flue (when using air intake system).

This PP vent system is constructed from flame-retardant plastic [polypropylene rated for a maximum temperature of 230°F (110°C)].

The PP venting system components must be listed to ULC S636 / UL-1738 (contact one of the venting suppliers see "Vent System Suppliers" on page 7).

DO NOT mix pipe, fittings, or joining methods from different vent system manufacturers.

The vent length requirements stated in this manual refer to "Independent Combustion Air/Common Flue Vent Dimensions" on page 26, and "Common Combustion Air/Common Flue Vent Dimensions" on page 27, these vent length must be observed.



## Vent Requirements

### Combustion air supply, room air dependent application only

This boiler requires fresh air for safe operation and must be installed in a mechanical room where there are provisions for adequate combustion and ventilation air.

Provisions for combustion and ventilation air must be made in accordance with CAN/CSA-B149.1 or .2 Natural Gas Installation Codes (for installations in Canada) or in accordance with sections for Combustion and Ventilation Air, of the National Fuel Gas Code, ANSI Z223.1 or applicable provisions of local codes (for installations in the U.S.A.) Always use latest edition of applicable standard.

Follow local codes to properly isolate the vent pipe when passing through floors, ceilings and roof.

Whenever possible, install boiler near an outside wall so that it is easy to duct fresh air directly to the boiler area. Refer to national codes for duct sizing. Round ducts may be used.

The boiler must be vented and supplied with combustion air and exhaust vents as described in this section. Ensure the vent and combustion air supply comply with these instructions.



### WARNING

Failure to provide an adequate supply of fresh combustion air can cause poisonous flue gases to enter living space, which can cause severe personal injury or loss of life.

The boiler location should never be under negative pressure. Exhaust fans, attic fans, or dryer fans may cause air to be exhausted at a rate higher than the air can enter the structure for safe combustion. Corrective action must be taken to ensure enough air is available. Never cover the boiler or store debris or other materials near the boiler, or in any way block the flow of adequate fresh combustion air to the boiler.

You must know the free area of louvers used to cover up the combustion and ventilation openings in closet installations. If you do not know the free area, assume 20% for wood louvers and 60-75% free area for metal louvers. When using louvers, the openings have to be made larger.

For example, a free 14 in. x 6 in. (356 mm x 152 mm) opening becomes a 14 in. x 10 in. (356 mm x 254 mm) opening for a grill containing metal louvers.



### CAUTION

Do not store chemicals containing chlorine or other corrosive materials near the boiler, such as bleach, cleaning solvents, detergents, acids, hair spray, spray cans, paint thinners, paint, water softener salt, perchloroethylene, or carbon tetra chloride.

## Index

### Safety

About these Instructions .....	2
Safety, Installation and Warranty Requirements .....	3
Important Regulatory Requirements .....	4

### Venting

General Venting Information .....	5
-----------------------------------	---

### Vent System Suppliers

Requirements for Rigid SS/PP(s) Vent Pipe Material .....	8
Vent Requirements .....	9

### Table of Contents

Index .....	10
-------------	----

### Installation

Boiler Layout .....	11
2 Boiler Manifold Dimensions .....	13
3 Boiler Manifold Dimensions .....	14
4 Boiler Manifold Dimensions - Linear .....	15
4 Boiler Manifold Dimensions - Back to Back .....	16
Venting Layout .....	17
Replacing the Coding Card .....	18
Coding Card Addresses .....	18
Secondary Flue Gas Flapper .....	19
Common Flue with Room Air Dependant Combustion Air Intake .....	21
Common Flue with Room Air Independent Combustion Air Intake .....	22
Common Flue with Common Combustion Air Intake .....	23
Split Common Flue with Common Combustion Air Intake .....	25
Independent Combustion Air/Common Flue Vent Dimensions .....	26
Common Combustion Air/Common Flue Vent Dimensions .....	27
Elbow Equivalent Length .....	28
Standard Sizes of Boiler Flue Gas Adaptors .....	28
Parallel Pipe Adaptor .....	28
Two Pipe Vent Starter Adaptor .....	29
Vent Termination Requirements .....	30
Vent Length Requirements .....	31
Installing Vent Piping .....	32
Boiler Flue Gas Flapper .....	33

### Componentry (System Options)


Two Pipe Options B2HA 285 to 530 (Direct Vent) .....	34
Single Pipe Options B2HA 285 to 530 (Room Air Dependent) .....	36

# Boiler Layout

## General


- Only the Vitodens 200 boilers B2HA 285, 311, 352, 399, 530 can be connected to a common vent (header).
- The Vitodens 200 boilers connected to the common vent must all be of the same size.
- A maximum of 4 boilers can be vented to a common venting system.
- A maximum of 4 boilers can be connected to a common air intake.
- Flue gas backflow is prevented by the integrated flue gas flapper see "Boiler Flue Gas Flapper" on page 33.

Wall mounted boilers

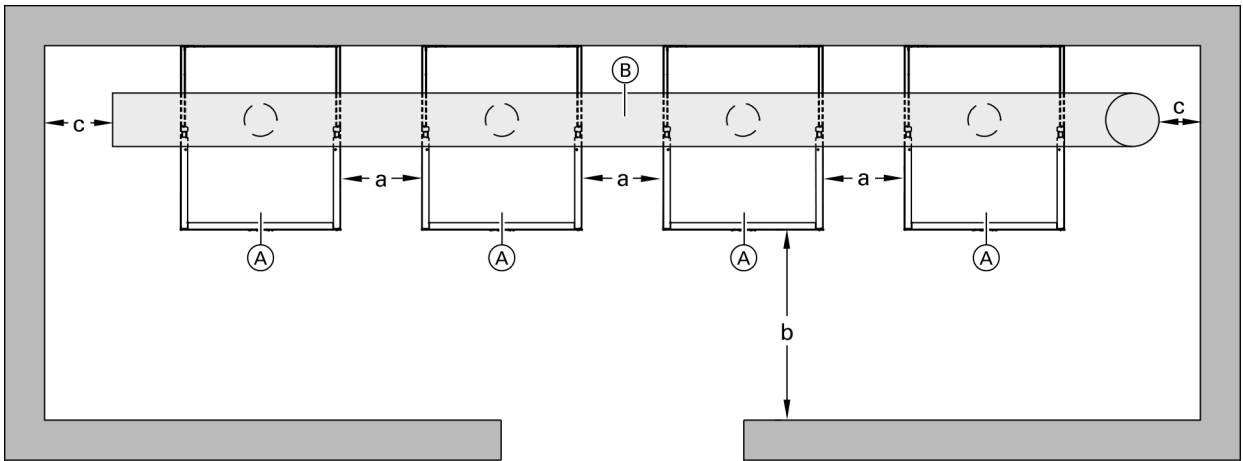

## Legend

- (A) Boiler
- (B) Flue gas common venting system

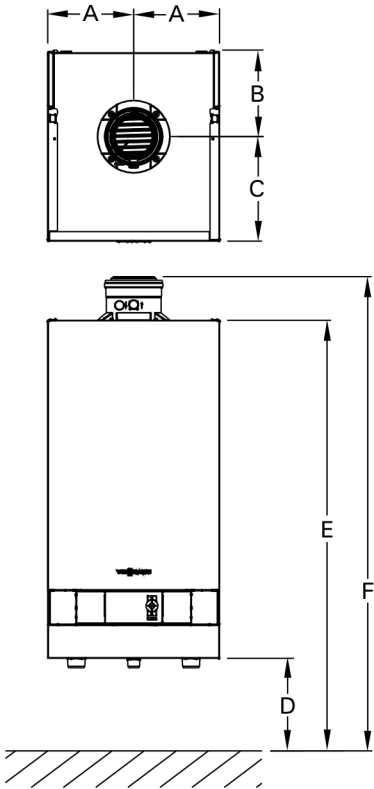

## Service Clearance Dimensions


a	1 in. (25 mm) minimum
b	28 in. (710 mm)
c	12 in. (305 mm)

## Boiler Dimensions

	B2HA 285, 311, 352 in. (mm)	B2HA 399, 530 in. (mm)
A	9½ (240)	11¾ (300)
B	9¼ (236)	11 (278)
C	11¾ (294)	16 (411)
D	40⅝ (1031)	38¾ (982)
E	77¾ (1975)	78¾ (1975)
F	83⅝ (2110)	83⅝ (2110)

Boiler Layout

Boilers mounted on a distribution manifold

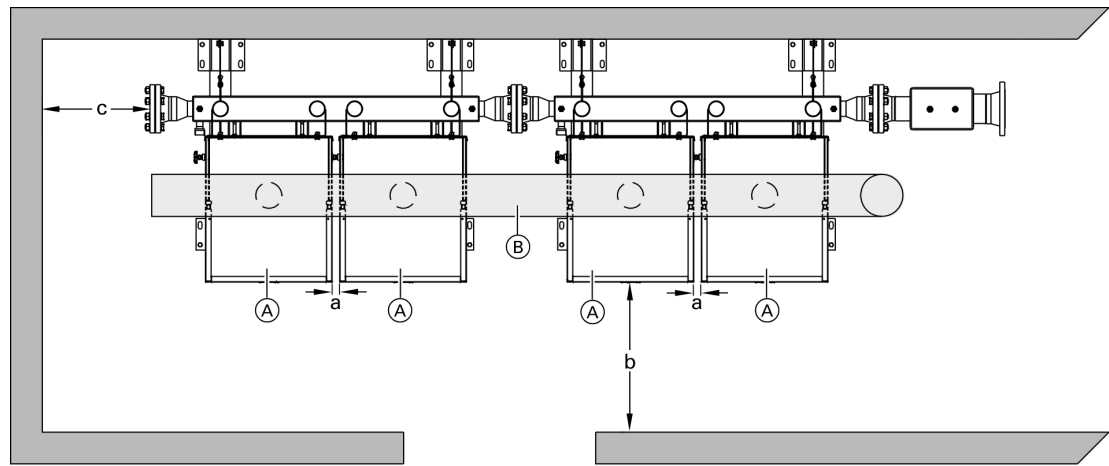


Legend

- (A) Boiler
- (B) Flue gas common venting system

Service Clearance Dimensions

a	1 in. (25 mm) minimum
b	28 in. (710 mm)
c	12 in. (305 mm)

Boilers mounted on a back to back distribution manifold

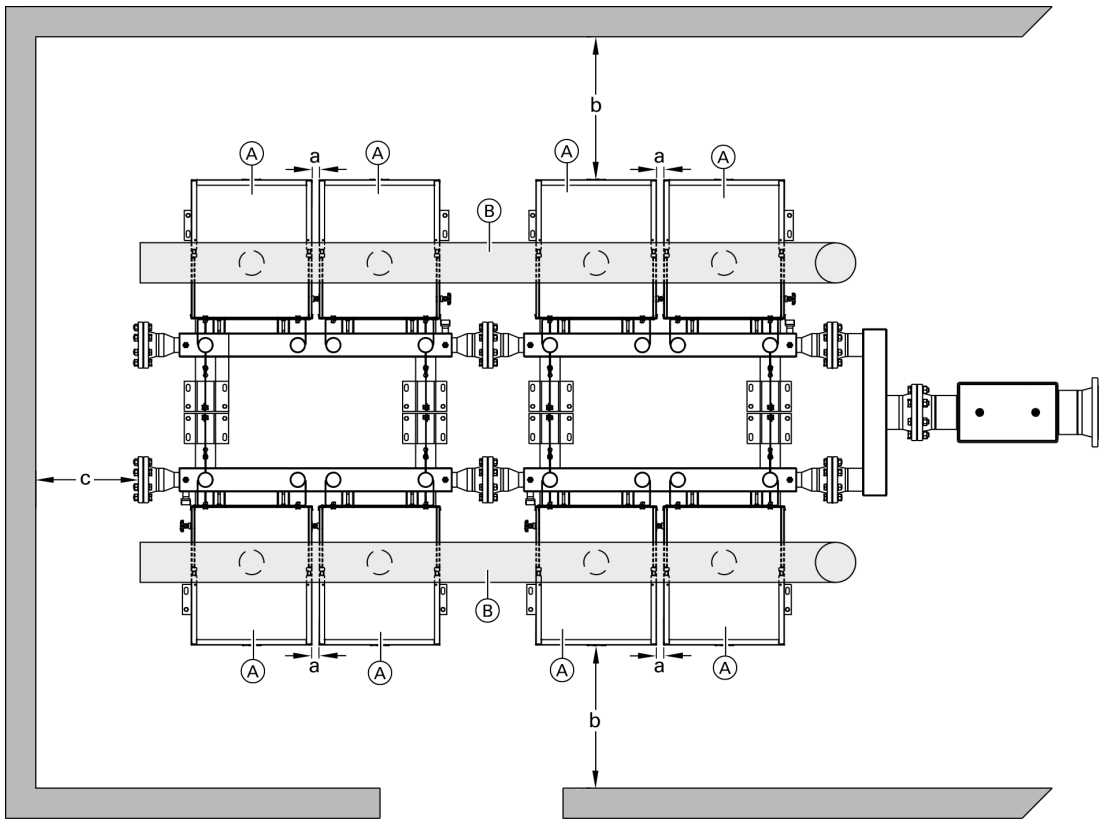

Legend


- (A) Boiler
- (B) Flue gas common venting system

Service Clearance Dimensions

a	1 in. (25 mm) minimum
b	28 in. (710 mm)
c	12 in. (305 mm)

# 2 Boiler Manifold Dimensions


**Note:** Example shown is the B2HA 285, 311, 352

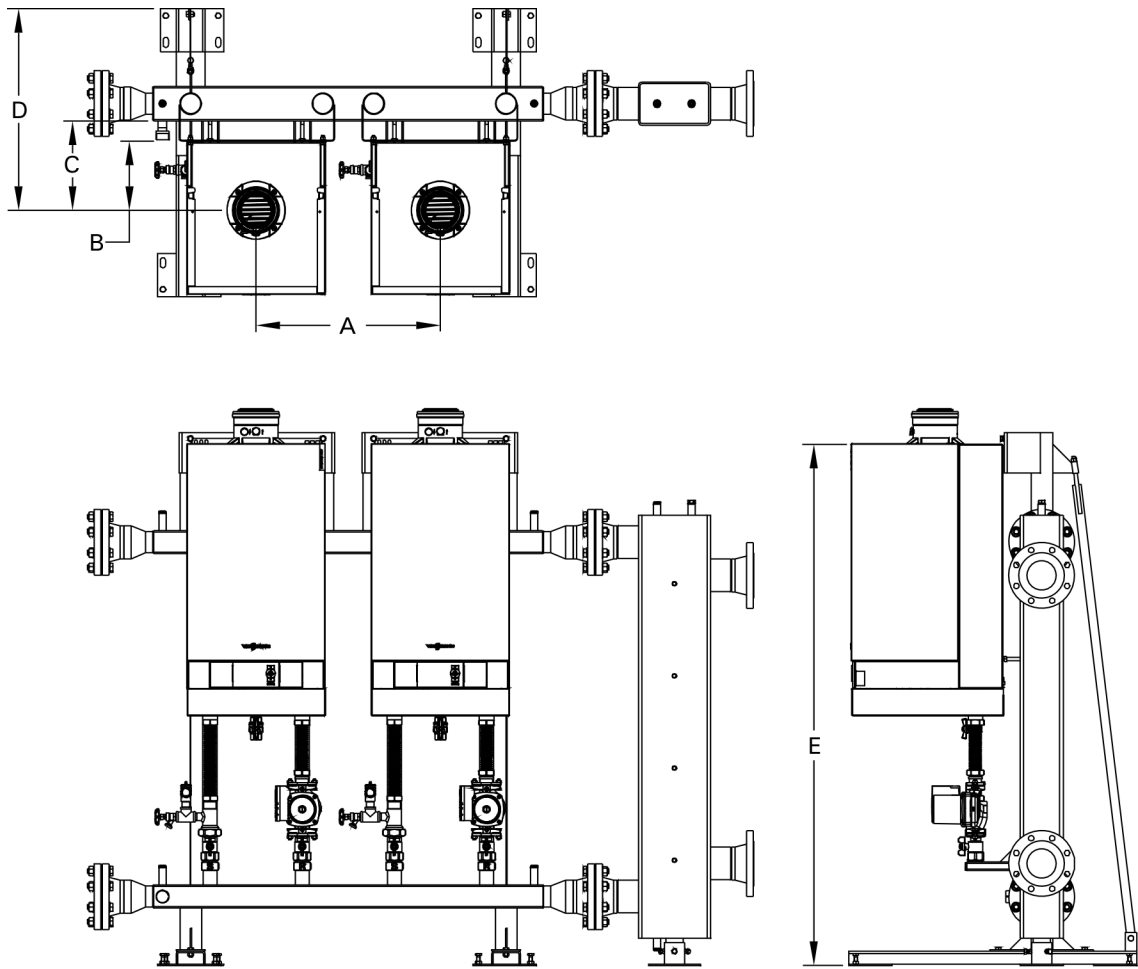

Boiler model		B2HA 285, 311, 352	B2HA 399, 530
A	in. (mm)	25 ¼ (640)	25 ¼ (640)
B	in. (mm)	9 ¾ (240)	11 (281)
C	in. (mm)	12 ¼ (310)	13 ¾ (351)
D	in. (mm)	27 ⅝ (700)	29 ¼ (741)
E	in. (mm)	76 (1933)	75 ½ (1920)

3 Boiler Manifold Dimensions


**Note:** Example shown is the B2HA 285, 311, 352

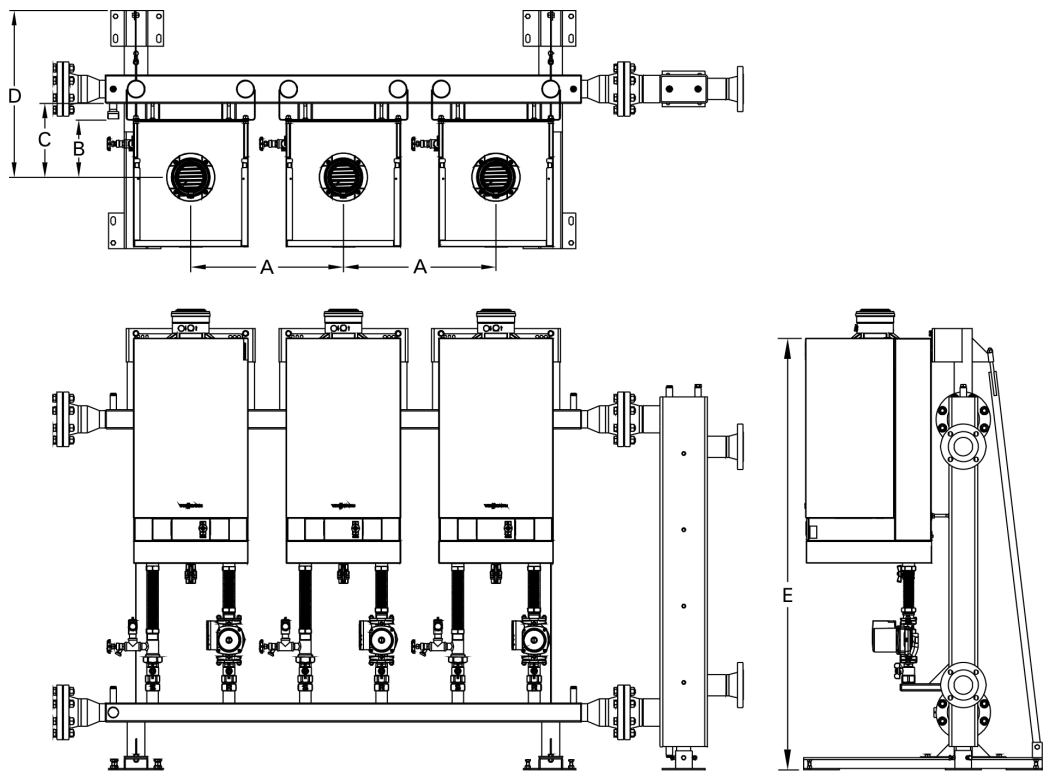

Boiler model		B2HA 285, 311, 352	B2HA 399, 530
A	in. (mm)	25¼ (640)	25¼ (640)
B	in. (mm)	9⅜ (240)	11 (281)
C	in. (mm)	12¼ (310)	13¾ (351)
D	in. (mm)	27⅝ (700)	29¼ (741)
E	in. (mm)	76 (1933)	75½ (1920)

**4 Boiler Manifold Dimensions - Linear**




**Note:** Example shown is the B2HA 285, 311, 352

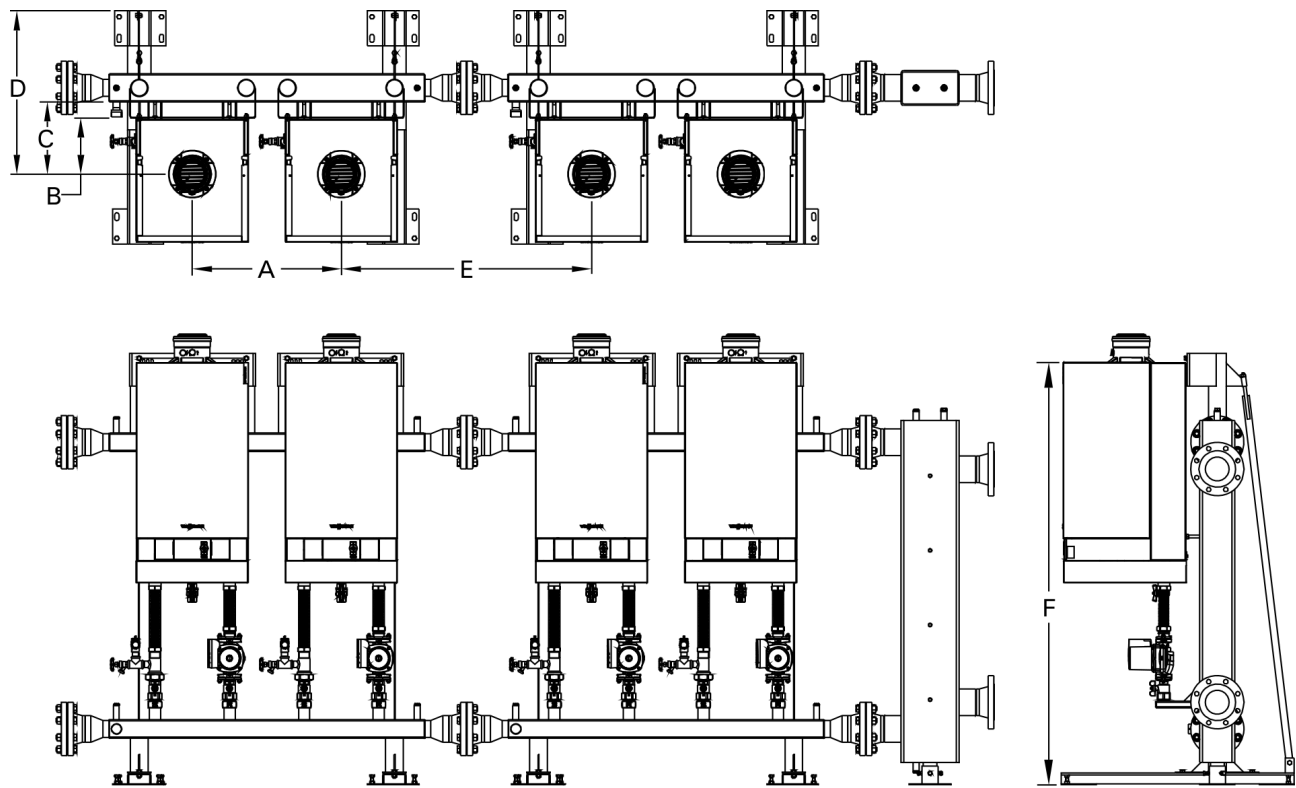

Boiler model		B2HA 285, 311, 352	B2HA 399, 530
A	in. (mm)	25¼ (640)	25¼ (640)
B	in. (mm)	9¾ (240)	11 (281)
C	in. (mm)	12¼ (310)	13¾ (351)
D	in. (mm)	27⅝ (700)	29¼ (741)
E	in. (mm)	42¼ (1073)	42¼ (1073)
F	in. (mm)	76 (1933)	75½ (1920)

## 4 Boiler Manifold Dimensions - Back to Back

**Note:** Example shown is the B2HA 285, 311, 352

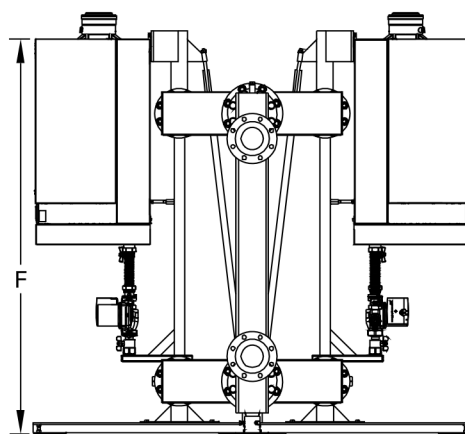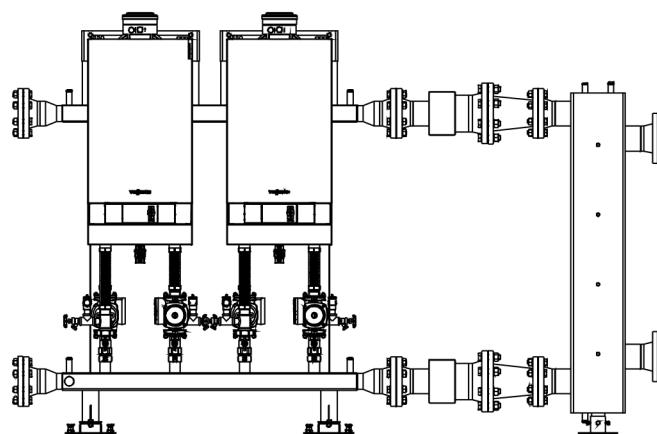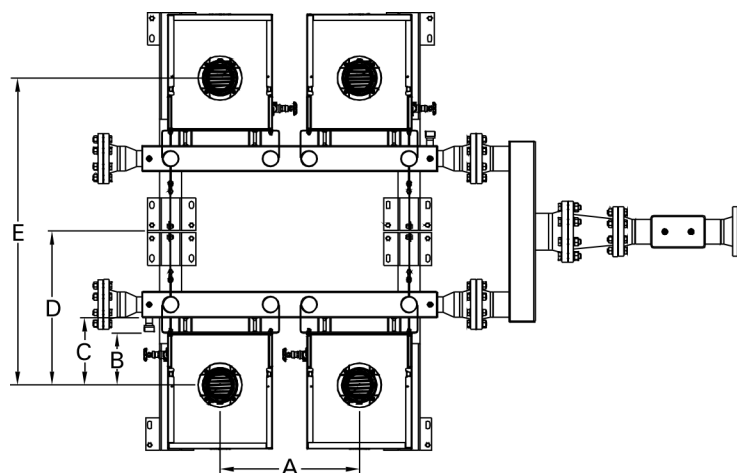

Boiler model		B2HA 285, 311, 352	B2HA 399, 530
A	in. (mm)	25¼ (640)	25¼ (640)
B	in. (mm)	9⅜ (240)	11 (281)
C	in. (mm)	12¼ (310)	13¾ (351)
D	in. (mm)	27⅝ (700)	29¼ (741)
E	in. (mm)	55½ (1410)	58¾ (1491)
F	in. (mm)	76 (1933)	75½ (1920)



## Venting Layout

### General

- Sidewall venting is NOT allowed, only vertical vent (room air dependant or independent), positive pressure cat. IV can be used when common venting.
- The maximum equivalent length of the venting system must not exceed the values specified in the charts starting with "Independent Combustion Air/Common Flue Vent Dimensions" on page 26.
- Available pressure at the flue outlet is 100 pa. (0.40 "w.c.). Pressure available at the outlet of the boiler flue collar can be used to calculate a revised vent system by the vent manufacturer (if needed).

### IMPORTANT

The Viessmann supplied secondary flue gas flapper must be used in the installation of Vitodens common vent systems.

### IMPORTANT


If the venting layout configurations described in these instructions are changed (e.g. including additional components) it is the responsibility of the venting manufacturer to recalculate the vent diameter. **DO NOT** reduce venting diameters listed.

### IMPORTANT

The boiler flue connection is not designed to support the weight of the vent system connected to the boiler. Contact the vent manufacturer for proper support. "Vent System Suppliers" on page 7.


### IMPORTANT

Condensate must drain from the flue pipe to the boiler. Ensure a suitable gradient of at least 2-3° [approx. 2 in. per 3.3 ft. (50 mm per 1 m)] on any horizontal venting components.

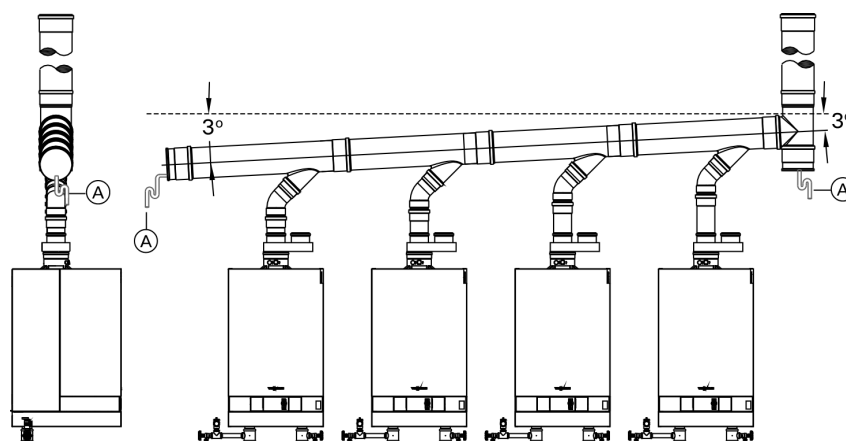

### Legend

- (A) Condensate drain piping
- (B) Individual feed elbow(s)
- (C) Header elbow
- (D) Base tee



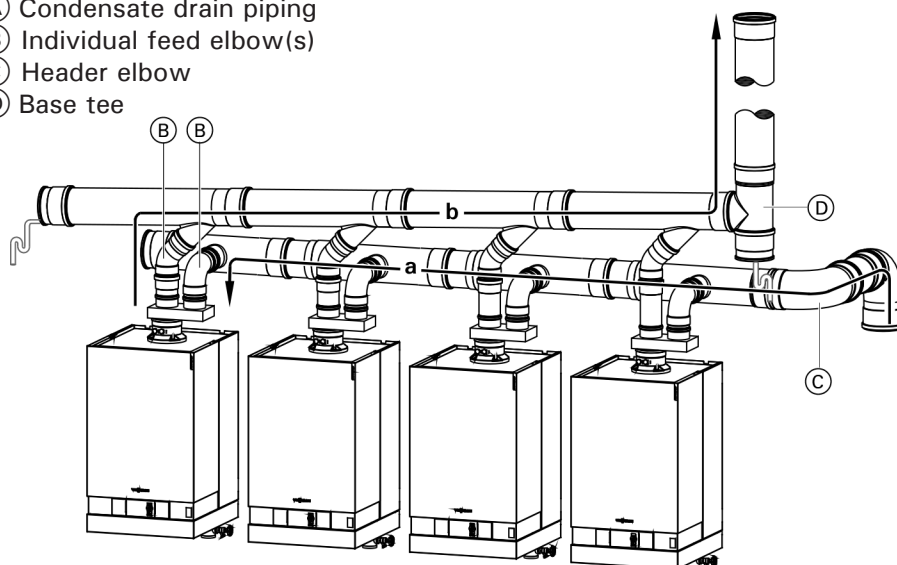


Exclude the header elbow (C) and base tee (D) from the equivalent vent length calculation.

### Note:

Maximum equivalent vent lengths for the combustion air intake (a) and the flue gas venting (b) are calculated separately. Refer to the charts starting with "Independent Combustion Air/Common Flue Vent Dimensions" on page 26 for maximum equivalent lengths.

## Replacing the Coding Card

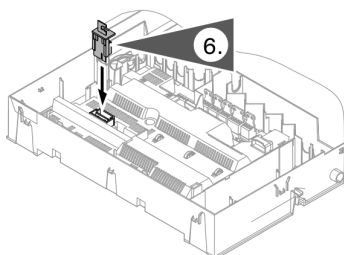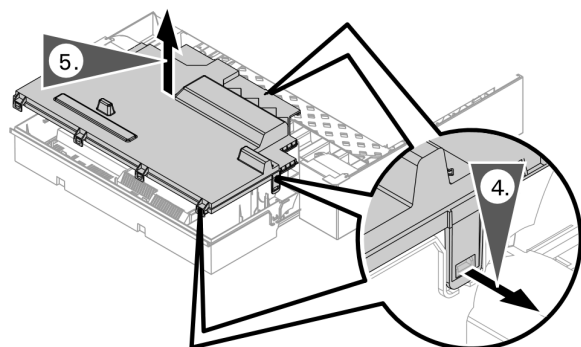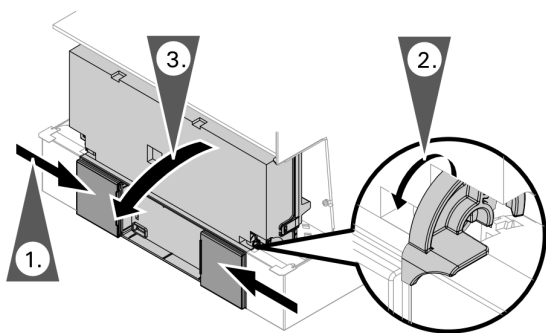

1. Slide closed the user interface programming unit covers.
2. Turn down both locks to unlock the control unit.
3. Flip down the control unit.
4. Release the control unit cover locking tabs.
5. Remove control unit cover.
6. Remove the coding card (cut cable tie) and replace with coding card supplied in the kit. Reassemble in reverse order.
7. Set the values recorded in the coding address table.
8. Start the boiler and adjust coding addresses.



To access the control, refer to the Installation and Service Instructions applicable to this boiler.

## Coding Card Addresses


Coding Address	Existing Set Value
82 (gas type)	
06	
28	
31	
6F	
altitude conversion (yes or no)	

When replacing the boiler coding card, some addresses must be reprogrammed. Before replacement, check and record the values in the coding address table.


### Note:

If the maximum heat output of the boiler has been reduced, the deration must be applied after changing the coding card.


## Secondary Flue Gas Flapper

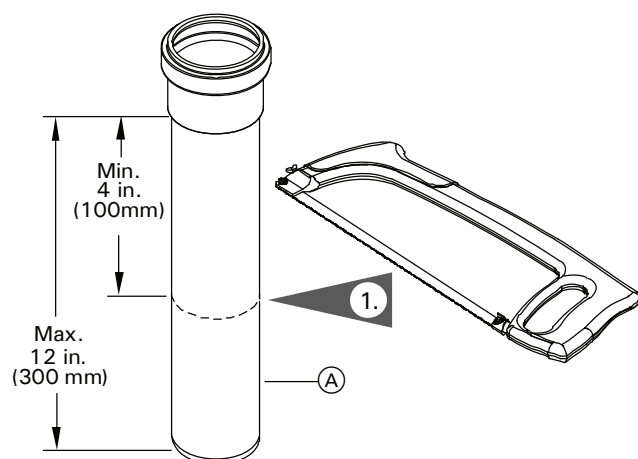

1. Cut the supplied 12 in. (300 mm) long PP(s) vent component to the required length. A minimum length of 4 in. (100 mm) is required.

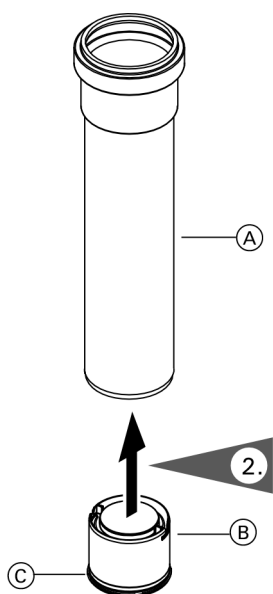


2. Insert the secondary flue gas flapper into the male end of the venting component. Apply water to the O-ring gasket to allow for smooth assembly.

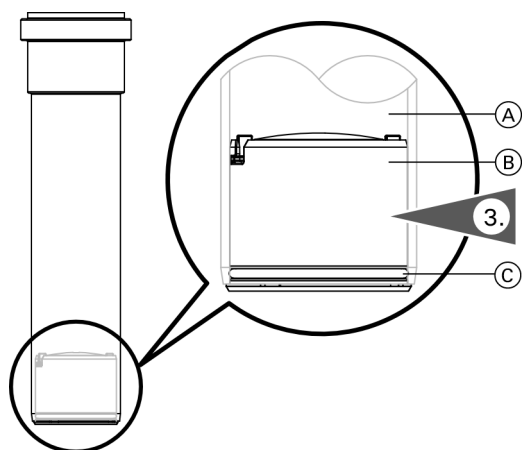

3. Ensure that the secondary flapper is fully seated within the venting component. A clicking sound will be heard when the secondary flue gas flapper is in place. The O-ring gasket must be fully seated within the vent component.

### Legend


- Ⓐ 12 in. Long 110 mm PP(s) pipe (supplied with the kit)
- Ⓑ Secondary Flue Gas Flapper (supplied with the kit)
- Ⓒ O-ring gasket (comes as part of the secondary flue gas flapper)

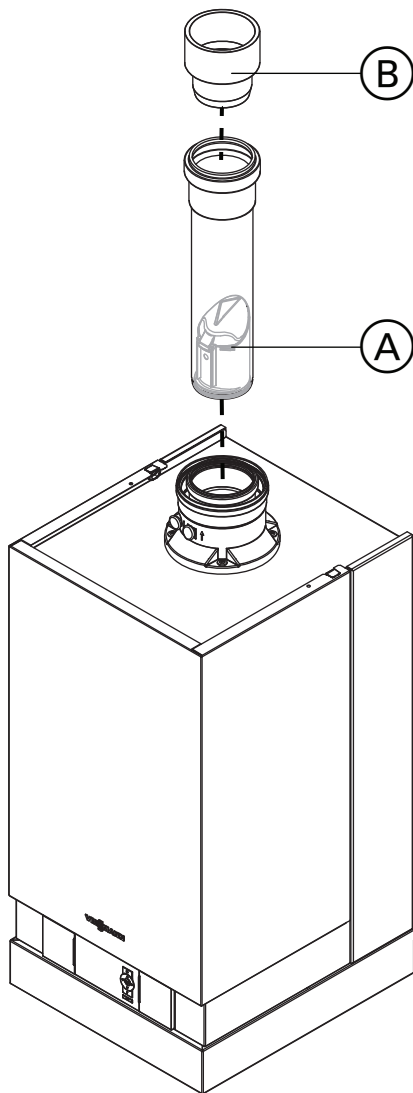**Secondary Flue Gas Flapper**


Install the vent pipe with the installed secondary flue gas flapper into the boiler vent collar. If using a CPVC venting system install the 110 mm to 4 in. CPVC adaptor (Viessmann Part Number 7134771) into the flapper pipe.

**Legend**


- Ⓐ Vent pipe with secondary flue gas flapper
- Ⓑ 110 mm to 4 in. CPVC vent adaptor (if required)

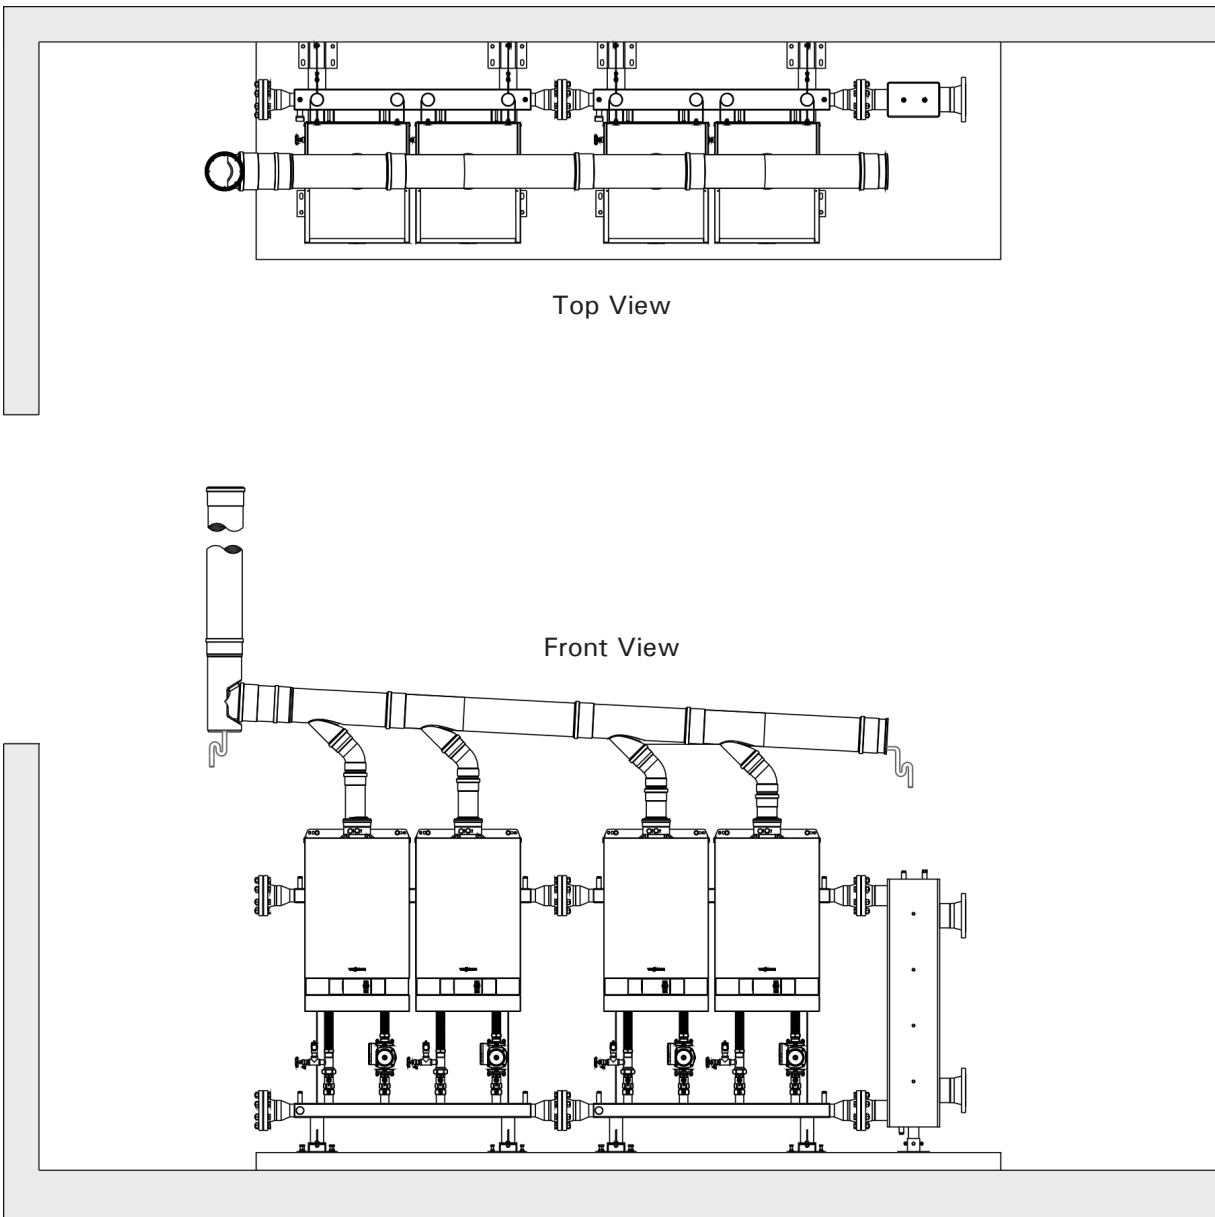**Common Flue with Room Air Dependant Combustion Air Intake****Note:**


This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

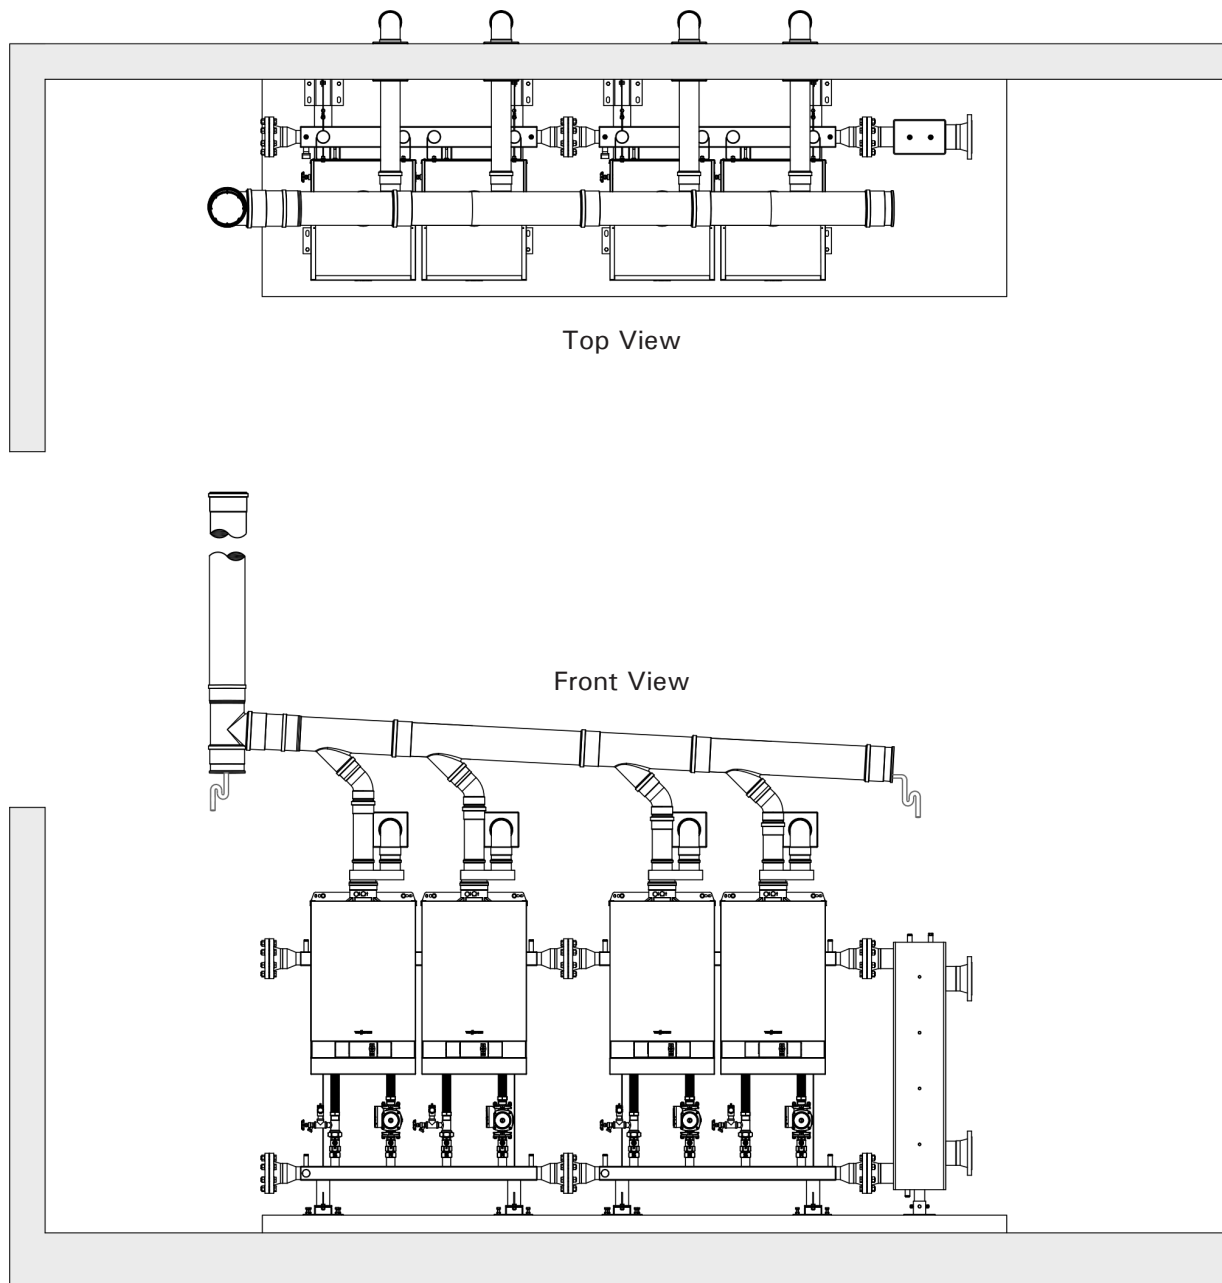**Common Flue with Room Air Independent Combustion Air Intake****Note:**

This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

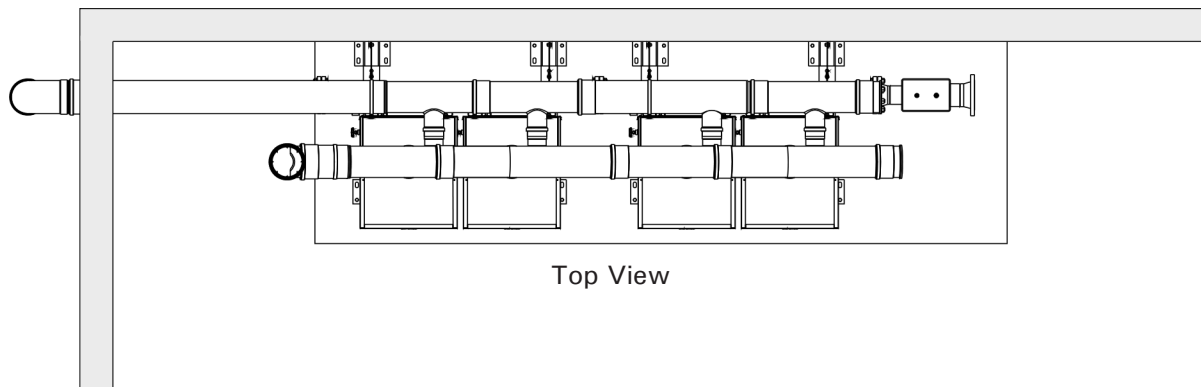**Common Flue with Common Combustion Air Intake**



Top View

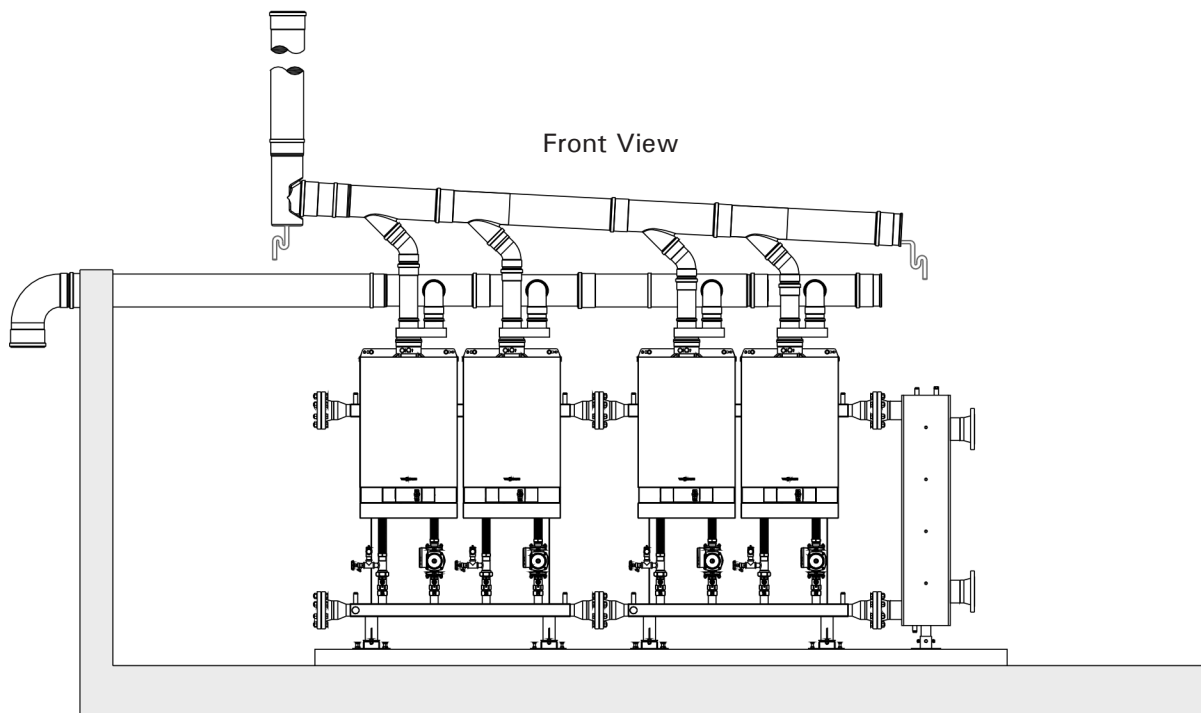

Front View


**Note:**

This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

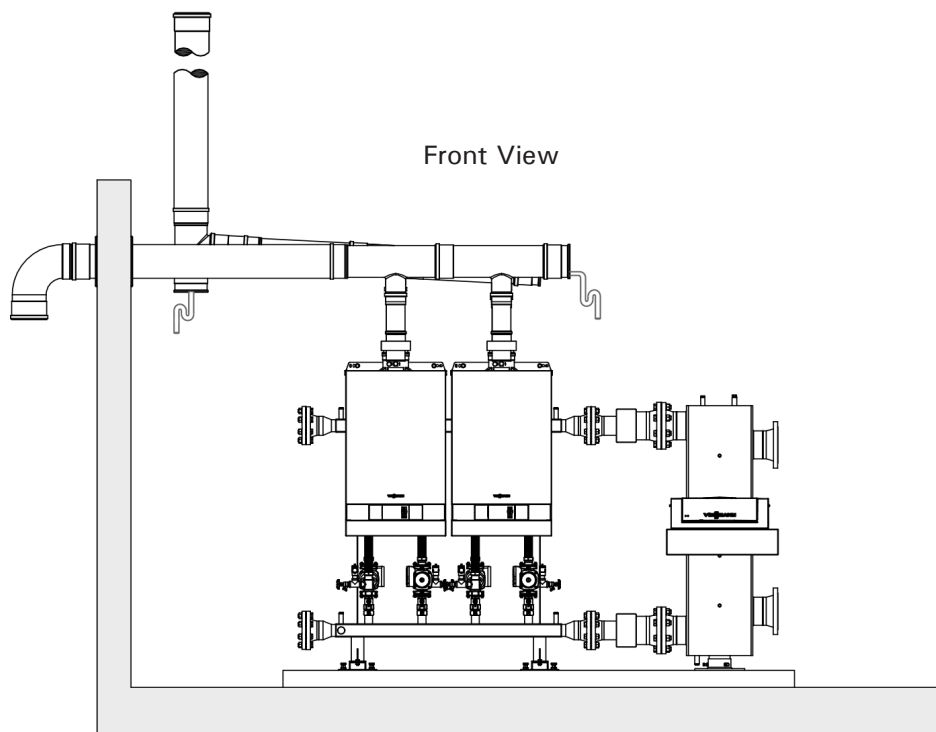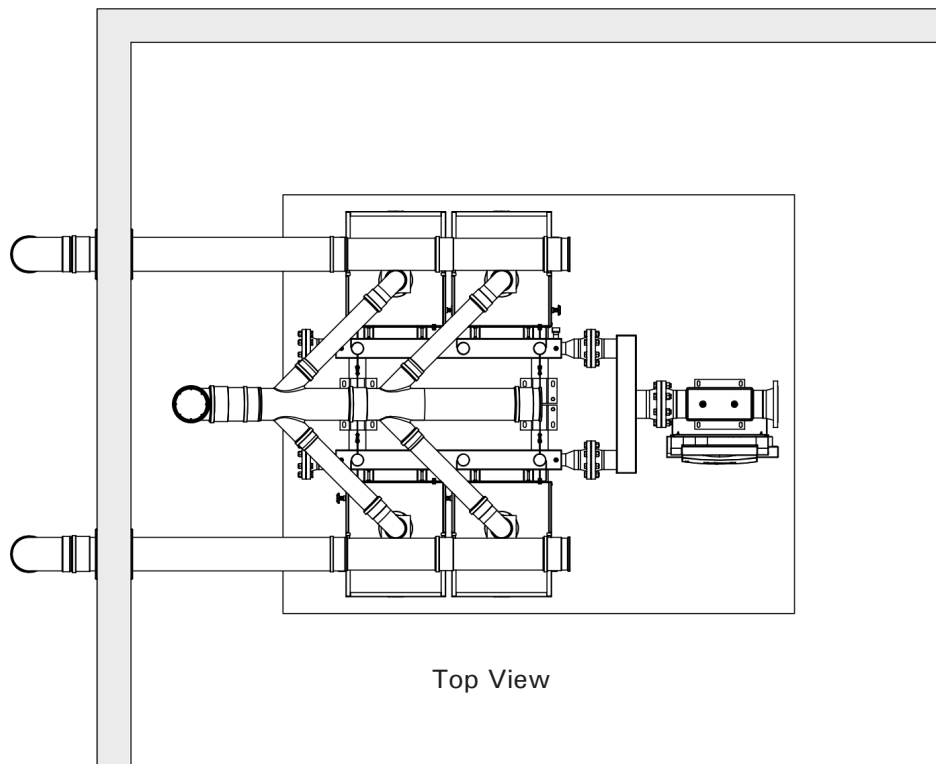
**Common Flue with Common Combustion Air Intake****Note:**

This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

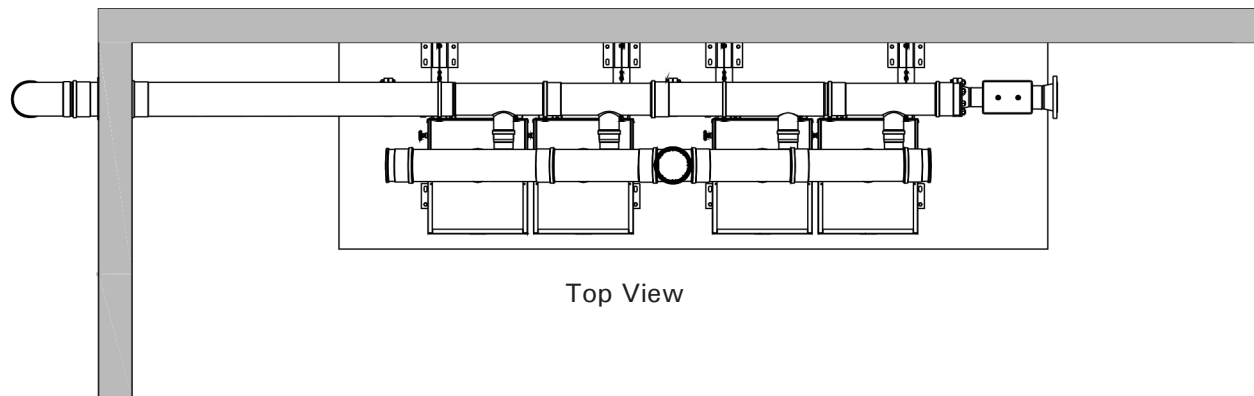

**Split Common Flue with Common Combustion Air Intake**

Top View

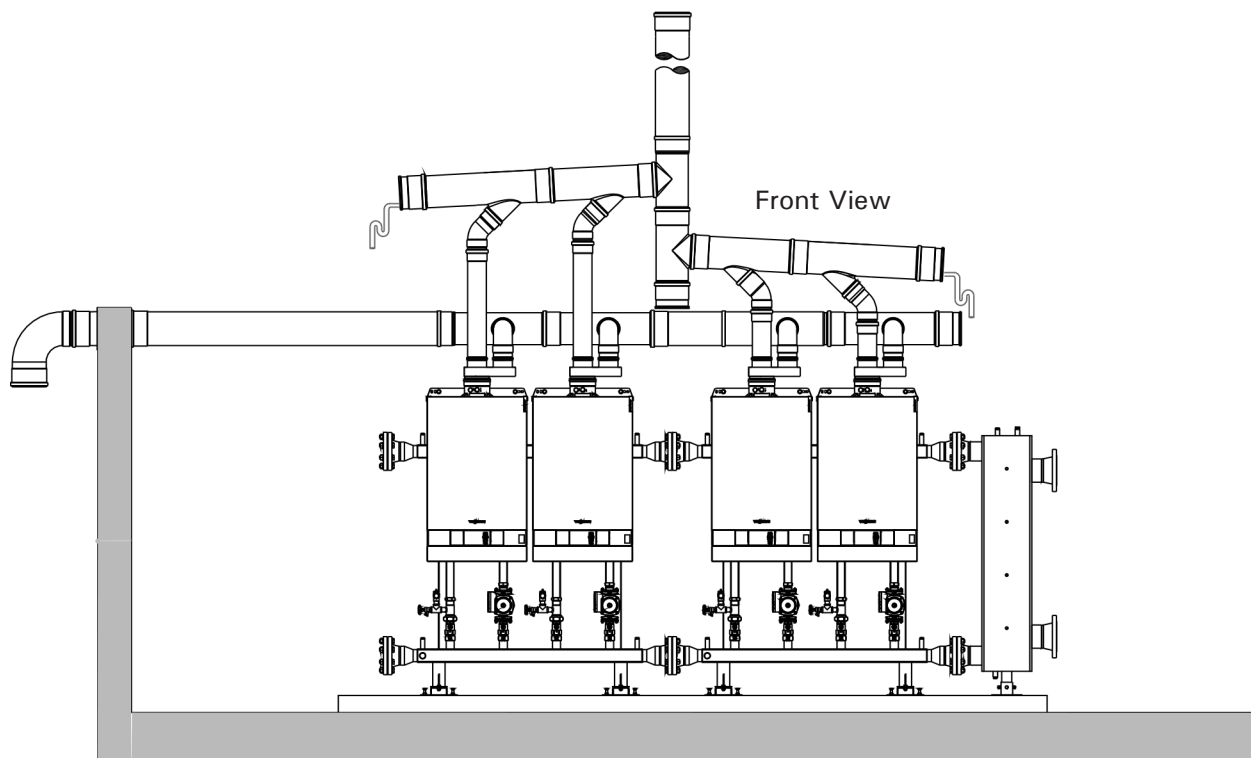

Front View

**Note:**

This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

## Independent Combustion Air/Common Flue Vent Dimensions

### Venting System for Vitodens 200 B2HA 285, 311, 352

Diameter				
	Common vertical flue	in. (mm)	6 (150)	8 (200)
	Common horizontal flue	in. (mm)	6 (150)	6 (150)
	Combustion air intake	in. (mm)	4 (100)	4 (100)
Maximum equivalent length				
2 Boilers	Flue	ft. (m)	100 (30)	--
	Combustion air intake (per boiler)	ft. (m)	33 (10)	--
3 Boilers	Flue	ft. (m)	100 (30)	--
	Combustion air intake (per boiler)	ft. (m)	33 (10)	--
4 Boilers	Flue	ft. (m)	33 (10)	100 (30)
	Combustion air intake (per boiler)	ft. (m)	33 (10)	33 (10)

### Venting System for Vitodens 200 B2HA 399, 530

Diameter					
	Common vertical flue	in. (mm)	8 (200)	8 (200)	12 (300)
	Common horizontal flue	in. (mm)	6 (150)	8 (200)	10 (250)
	Combustion air intake	in. (mm)	4 (100)	4 (100)	4 (100)
Maximum equivalent length					
2 Boilers	Flue	ft. (m)	100 (30)	--	--
	Combustion air intake (per boiler)	ft. (m)	33 (10)	--	--
3 Boilers	Flue	ft. (m)	86 (26)	100 (30)	--
	Combustion air intake (per boiler)	ft. (m)	33 (10)	33 (10)	--
4 Boilers	Flue	ft. (m)	N/A	N/A	100 (30)
	Combustion air intake (per boiler)	ft. (m)	N/A	N/A	33 (10)

**Note:**

Only same size and same series boilers can be connected to a common venting system.

**Note:**

Individual feed elbows from the boiler must be included in the equivalent vent length calculation. See "Elbow Equivalent Length" on page 28 for elbow equivalent lengths. One 90° elbow (or two 45° elbows) and one base tee on the common header are excluded from the equivalent vent length calculation. See "Venting Layout" on page 17 to calculate equivalent vent lengths.

## Common Combustion Air/Common Flue Vent Dimensions

### Venting System for Vitodens 200 B2HA 285, 311, 352

#### Diameter

	Common vertical flue	in. (mm)	6 (150)	8 (200)	8 (200)
	Common horizontal flue	in. (mm)	6 (150)	6 (150)	8 (200)
	Common Combustion air intake	in. (mm)	6 (150)	8 (200)	8 (200)

#### Maximum equivalent length

2 Boilers	Flue	ft. (m)	100 (30)	--	--
	Combustion air intake	ft. (m)	33 (10)	--	--
3 Boilers	Flue	ft. (m)	40 (12)	100 (30)	--
	Combustion air intake	ft. (m)	33 (10)	33 (10)	--
4 Boilers	Flue	ft. (m)	N/A	N/A	100 (30)
	Combustion air intake	ft. (m)	N/A	N/A	33 (10)

### Venting System for Vitodens 200 B2HA 399, 530

#### Diameter

	Common vertical flue	in. (mm)	8 (200)	8 (200)	12 (300)
	Common horizontal flue	in. (mm)	6 (150)	8 (200)	10 (250)
	Common combustion air intake	in. (mm)	8 (200)	10 (250)	14 (350)

#### Maximum equivalent length

2 Boilers	Flue	ft. (m)	100 (30)	--	--
	Combustion air intake	ft. (m)	33 (10)	--	--
3 Boilers	Flue	ft. (m)	N/A	100 (30)	--
	Combustion air intake	ft. (m)	N/A	33 (10)	--
4 Boilers	Flue	ft. (m)	N/A	N/A	100 (30)
	Combustion air intake	ft. (m)	N/A	N/A	33 (10)

#### Note:

Only same size and same series boilers can be connected to a common venting system.

#### Note:


Individual feed elbows from the boiler must be included in the equivalent vent length calculation. See "Elbow Equivalent Length" on page 28 for elbow equivalent lengths. One 90° elbow (or two 45° elbows) and one base tee on the common header are excluded from the equivalent vent length calculation. See "Venting Layout" on page 17 to calculate equivalent vent lengths.

Elbow Equivalent Length

Equivalent Length

Elbow type	4 in. (100 mm)	6 in. (150 mm), 8 in. (200 mm), 10 in. (250 mm), 12 in. (300 mm), 14 in. (350 mm)
45°	1 ft. (0.3 m)	5 ft. (1.5 m)
90°	1.6 ft. (0.5 m)	10 ft. (3 m)

Standard Sizes of Boiler Flue Gas Adaptors

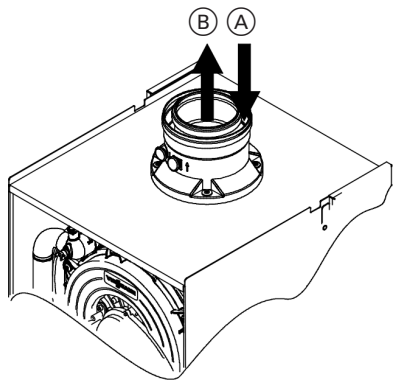


Legend

- (A) Combustion air
- (B) Flue gas


Standard sizes of boiler flue gas adaptors

Boiler model	Adaptor Size
B2HA 285	110 / 150
B2HA 311	110 / 150
B2HA 352	110 / 150
B2HA 399	110 / 150
B2HA 530	110 / 150

Parallel Pipe Adaptor

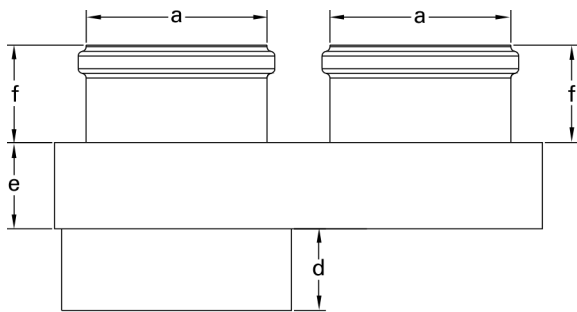


	Vitodens B2HA 285, 311, 352, 399, 530
a	110 mm
b	150 mm
c	6.9 in. (175 mm)
d	2.2 in. (52 mm)
e	2.2 in. (55 mm)
f	2.7 in. (68 mm)

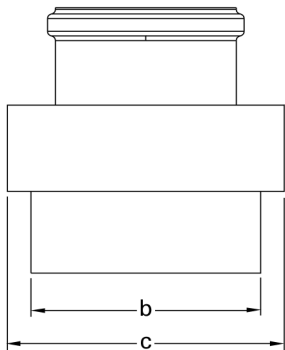


# Two Pipe Vent Starter Adaptor

Parallel vent pipe starter adaptors for  
B2HA 285, 311, 352, 399, 530

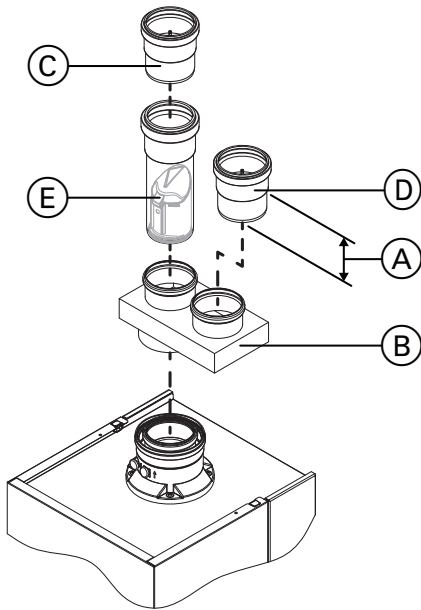

## Legend

- Ⓐ Air intake, max. insertion 2 ½ in. (64 mm)
- Ⓑ Viessmann parallel adaptor
- Ⓒ PP(s) slip joint transition adaptor (110 mm to 100 mm) only required if M&G system is used
- Ⓓ Air intake starter adaptor for PVC, CPVC and ABS, when using PP(s) system 110 mm to 100 mm, a transition adaptor is required.
- Ⓔ Secondary Flue Gas Flapper

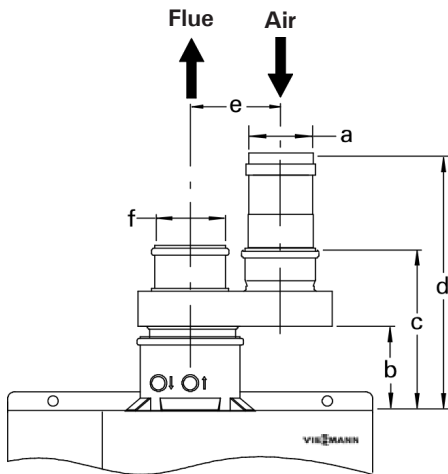

## Legend



- a 4 in. (100 mm)
- b 5 1/8 in. (130 mm)
- c 9 3/8 in. (237 mm)
- d approx. 12 7/8 in. (327 mm)
- e 5 1/2 in. (140 mm)
- f 110 mm

## Parallel adaptor for two-pipe system

Supplier	Boiler Model	Ø in. (mm)	Quantity
Viessmann	B2HA 285, 311, 352, 399, 530	4 (110)	1

Vent Termination Requirements

The vent must be installed observing local regulations in addition to National Codes, CAN/CSA-B149.1 or 2 (for installations in Canada) or ANSI-Z223.1 or NFPA 54 (for installations in the U.S.A.).

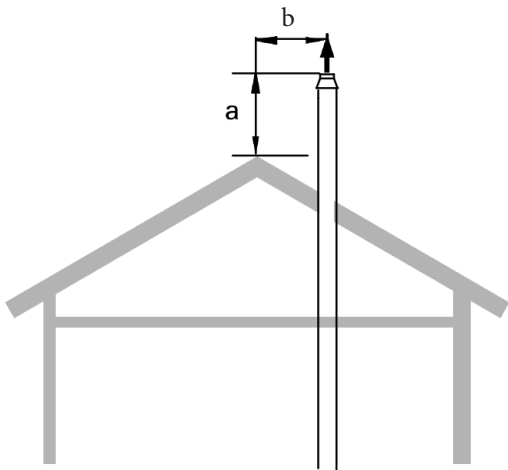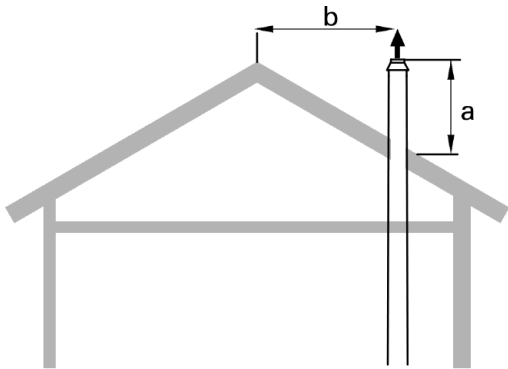


- For sloped roof applications with distance b less than 18 in. (450 mm)


a    minimum 18 in. (450 mm)  
b    < 18 in. (450 mm)

See table below for the following two conditions.

- For sloped roof applications with distance b greater than 18 in. (450 mm)
- For flat roof applications

Boiler Model	a (min. distance)
Vitodens 200-W	18 in. (450 mm)

**WARNING**  
Vent termination must be at least 12 in. (300 mm) above the anticipated snow level (consult your local building authorities or local weather office). Locate vent termination in such a way that it cannot be blocked by snow.

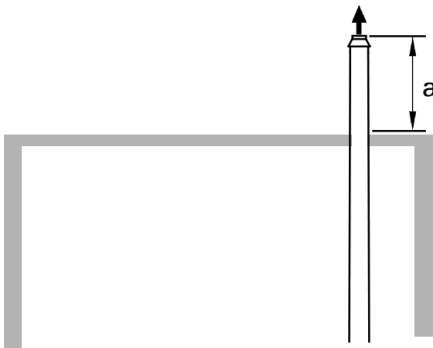

A vent used in a special venting system with positive vent pressure and passing through a roof shall extend at least 18 in. (450 mm) above the highest point where it passes through the roof and any other obstruction within a horizontal distance of 18 in. (450 mm).

The special vent system shall not be routed into, through, or within any other vent such as an existing masonry or factory-built chimney.


IMPORTANT

A masonry chimney flue may be used to route the venting system only if no other appliance is vented in the same flue.


## Vent Length Requirements

### Multiple boiler installations (vertical termination with multiple boilers)


When terminating the vertical vent pipes of multiple Vitodens boilers, a minimum clearance of 4 inches (100 mm) is required between the outside edges of each vent pipe.

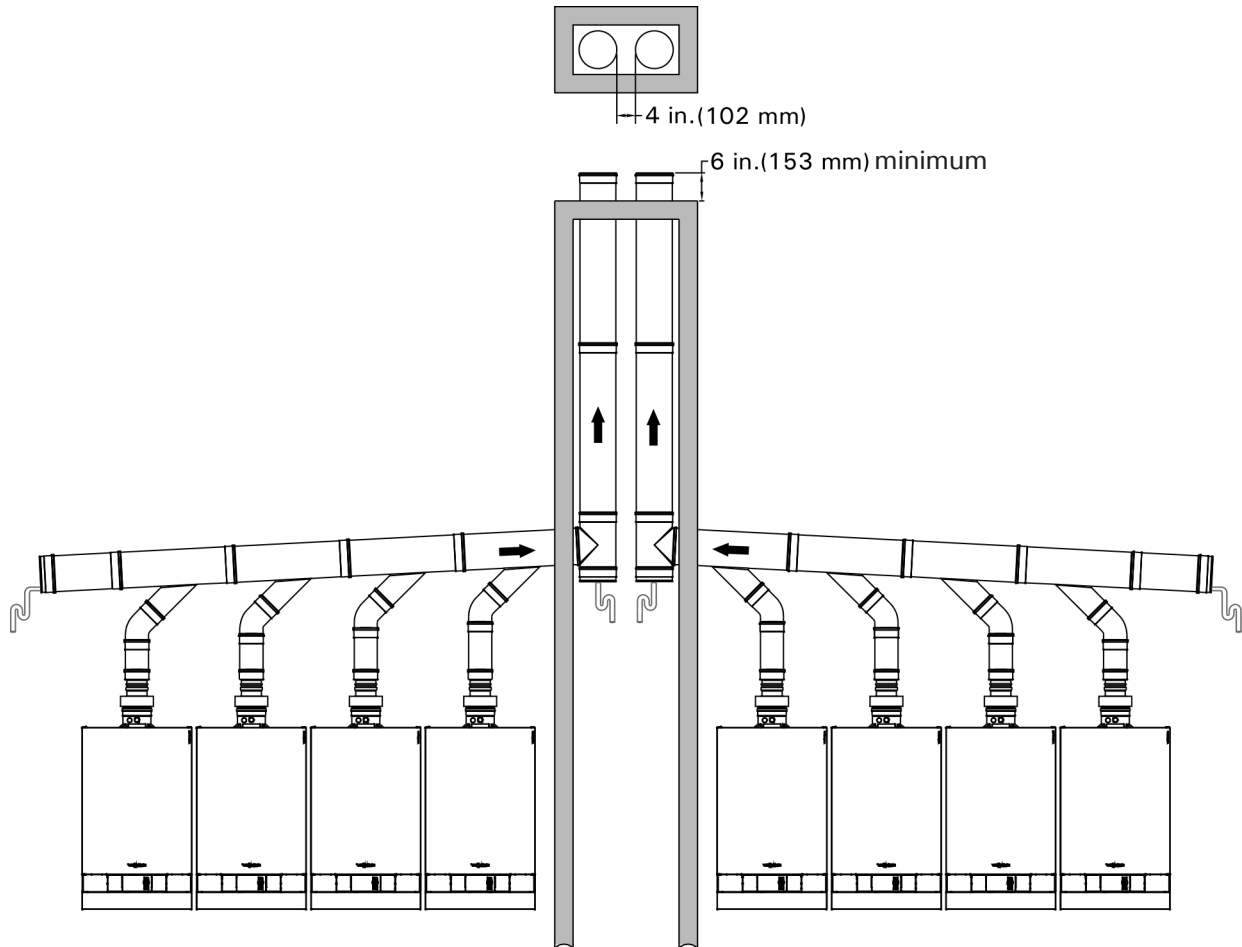


## Installing Vent Piping




2x Vitodens 200-W




3x Vitodens 200-W



4x Vitodens 200-W (linear)

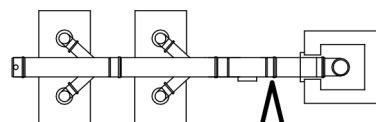


4x Vitodens 200-W (back-to-back)

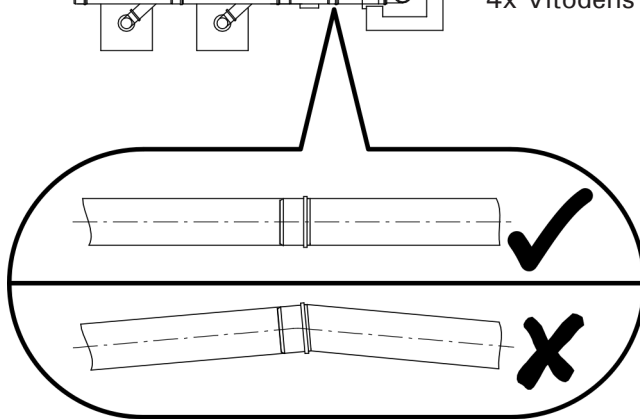**Note:**

Ensure that venting connections are aligned properly as per the manufacturer's instructions.



## Boiler Flue Gas Flapper

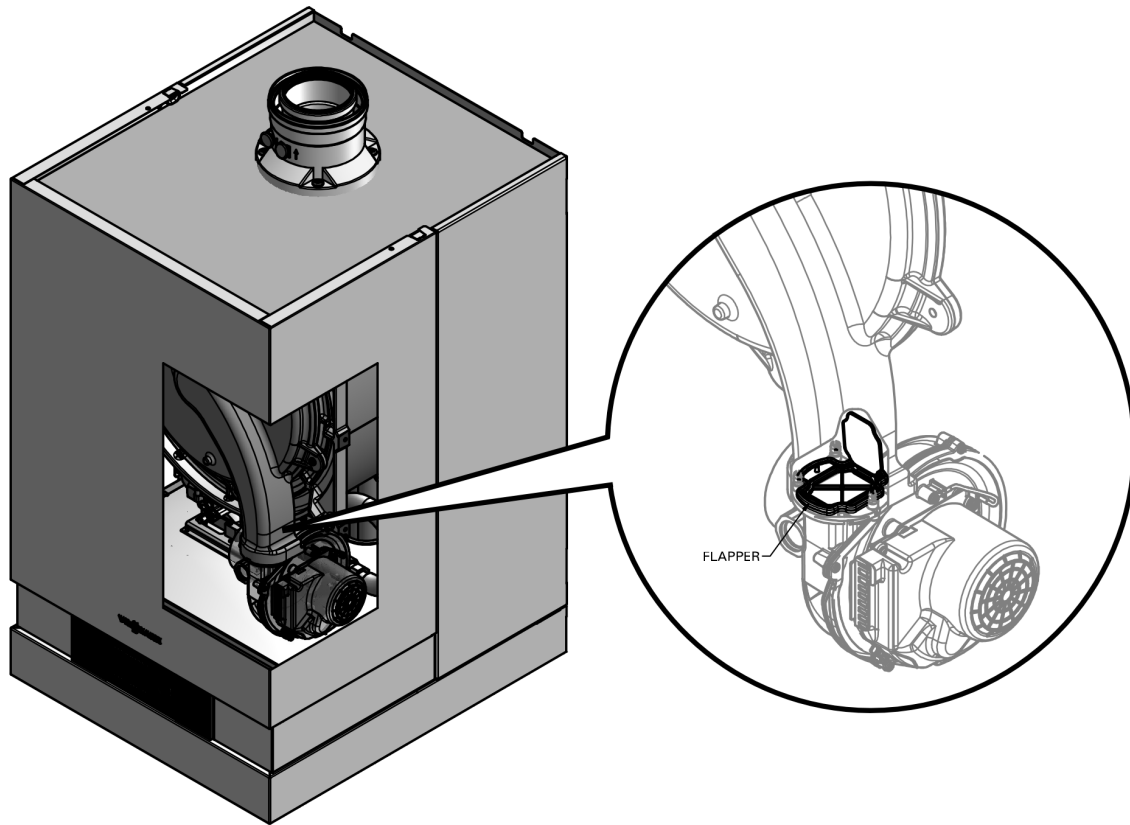

### Boiler integrated flue gas flapper operation

The boiler integrated mechanical flue gas flapper is designed to prevent flue gas back flow through the boiler by utilizing burner pressure to open and close the flapper. The flapper is only open during burner operation and closed when the burner is not in operation. The boiler integrated flue gas flapper in conjunction with the Viessmann supplied secondary flue gas flapper provides an effective seal against back flow to the common venting system.




### WARNING

**Failure to provide adequate protection against flue gas leakage into living space can cause personal injury and/or loss of life!**

This boiler is certified for use in a category IV positive pressure common venting system application. When this boiler is installed as part of a common venting system, performing service work, such as removing the burner and/or heat exchanger assemblies, requires that all other boilers in the common venting system are shut down until the service work has been completed.

If the boiler's burner and/or heat exchanger assembly remains open, the boiler must be disconnected from the common venting system and the boiler flue connection on the common venting system must be sealed to prevent any flue gas leakage into the boiler room.

## Two Pipe Options B2HA 285 to 530 (Direct Vent)

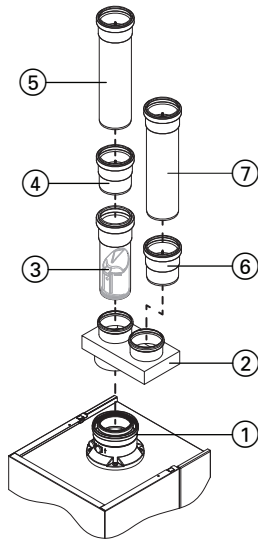


PP(s) Vent pipe/PP(s) Air intake pipe

#	Component	Supplied
①	Boiler coaxial adaptor (110 mm / 150 mm)	<i>C/W Boiler</i>
②	Double pipe adaptor (110 mm/150 mm to 110 mm/110 mm)	<i>Viessmann</i>
③	Secondary flue gas flapper	<i>Viessmann</i>
④	Vent starter adaptor* (110 mm to 100 mm)	<i>Field</i>
⑤	Vent Component	<i>Field</i>
⑥	Air intake starter adaptor* (110 mm to 100 mm)	<i>Field</i>
⑦	Air intake component	<i>Field</i>

\*with M&G / Duravent system only.

### IMPORTANT

For PP(s) systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).

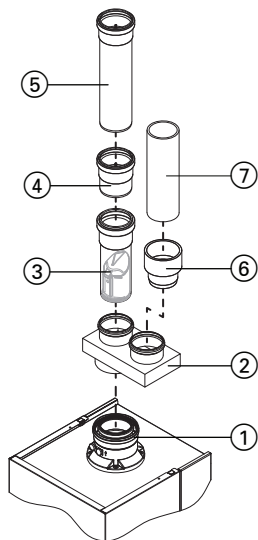

PP(s) Vent pipe/CPVC, ABS or PVC Air intake pipe


#	Component	Supplied
①	Boiler coaxial adaptor (110 mm / 150 mm)	<i>C/W Boiler</i>
②	Double pipe adaptor (110 mm/150 mm to 110 mm/110 mm)	<i>Viessmann</i>
③	Secondary flue gas flapper	<i>Viessmann</i>
④	Vent starter adaptor* (110 mm to 100 mm)	<i>Field</i>
⑤	Vent Component	<i>Field</i>
⑥	Air intake starter adaptor, (110 mm to 4 in.)	<i>Viessmann</i>
⑦	Air intake component	<i>Field</i>

\*with M&G / Duravent system only.

### IMPORTANT


For PP(s) systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).

## Two Pipe Options B2HA 285 to 530 (Direct Vent)

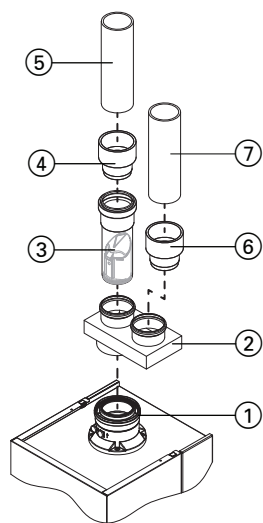

**CPVC Vent pipe/CPVC, ABS or PVC Air intake pipe**


#	Component	Supplied
①	Boiler coaxial adaptor (110 mm / 150 mm)	<i>C/W Boiler</i>
②	Double pipe adaptor (110 mm/150 mm to 110 mm/110 mm)	<i>Viessmann</i>
③	Secondary flue gas flapper	<i>Viessmann</i>
④	Vent starter adaptor, (110 mm to 4 in.)	<i>Viessmann</i>
⑤	Vent Component	<i>Field</i>
⑥	Air intake starter adaptor, (110 mm to 4 in.)	<i>Viessmann</i>
⑦	Air intake component	<i>Field</i>

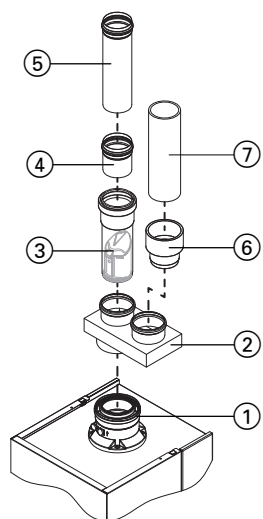

**Stainless Steel Vent pipe, ABS or PVC Air intake pipe**

#	Component	Supplied
①	Boiler coaxial adaptor (110 mm / 150 mm)	<i>C/W Boiler</i>
②	Double pipe adaptor (110 mm/150 mm to 110 mm/110 mm)	<i>Viessmann</i>
③	Secondary flue gas flapper	<i>Viessmann</i>
④	Vent starter adaptor (Stainless Steel)	<i>Field</i>
⑤	Vent Component	<i>Field</i>
⑥	Air intake starter adaptor, (110 mm to 4 in.)	<i>Viessmann</i>
⑦	Air intake component	<i>Field</i>

# Single Pipe Options B2HA 285 to 530 (Room Air Dependent)

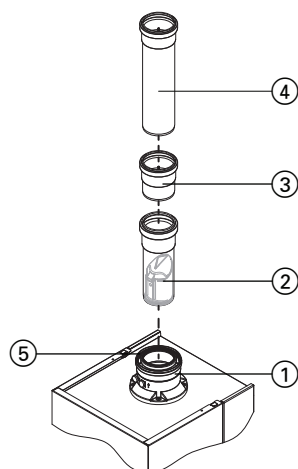


PP(s) Vent pipe		
#	Component	Supplied
①	Boiler coaxial adaptor (110 mm / 150 mm)	C/W Boiler
②	Secondary flue gas flapper	Viessmann
③	Vent starter adaptor* (110 mm to 100 mm)	Field
④	Vent Component	Field
⑤	Combustion air inlet (location)	


\*with M&G / Duravent system only.

## IMPORTANT

For PP(s) systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).

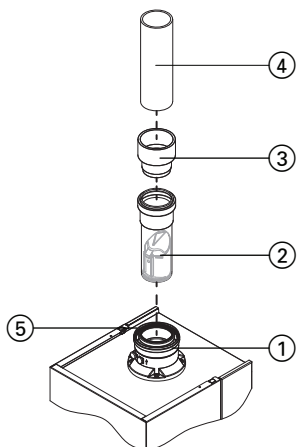

CPVC Vent pipe		
#	Component	Supplied
①	Boiler coaxial adaptor (110 mm / 150 mm)	C/W Boiler
②	Secondary flue gas flapper	Viessmann
③	Vent starter adaptor, (110 mm to 4 in.)	Viessmann
④	Vent Component	Field
⑤	Combustion air inlet (location)	

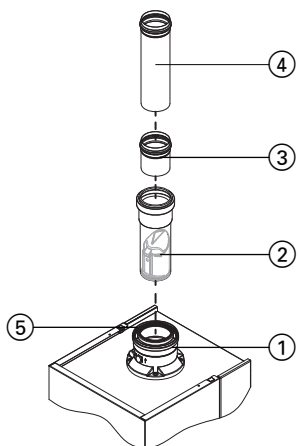

Stainless Steel Vent pipe		
#	Component	Supplied
①	Boiler coaxial adaptor (110 mm / 150 mm)	C/W Boiler
②	Secondary flue gas flapper	Viessmann
③	Vent starter adaptor (Stainless Steel)	Field
④	Vent Component	Field
⑤	Combustion air inlet (location)	










Viessmann Manufacturing Company (U.S.) Inc.  
 45 Access Road  
 Warwick, Rhode Island · 02886 · USA  
 TechInfo Line 1-888-484-8643  
 1-800-288-0667 · Fax (401) 732-0590  
 www.viessmann-us.com · info@viessmann-us.com

Viessmann Manufacturing Company ULC  
 750 McMurray Road  
 Waterloo, Ontario · N2V 2G5 · Canada  
 TechInfo Line 1-888-484-8643  
 1-800-387-7373 · Fax (519) 885-0887  
 www.viessmann.ca · info@viessmann.ca

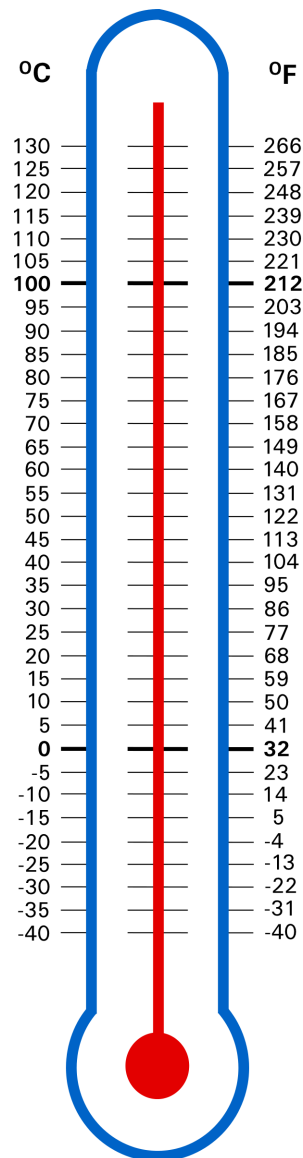

Technical information subject to change without notice.

Printed on environmentally friendly  
 (recycled and recyclable) paper.